
OWNER' S MANUAL

WIRE CONTROLLER OF AIR CONDITIONER

MODEL: KJR-12B/DP(T)-E KJR-12B/DP(T)-E(C) KJR-12B/DP(T)-E(H) KJR-12B/DPC(T)-E KJR-12B/DP(T)-F RCW8(P/N:7ACEL1706)

Thank you very much for purchasing our product. Before using your unit, please read this manual carefully and keep it for future reference.

4. NAME AND FUCTION OF INDICATORS ON	THE
CONTROLLER	

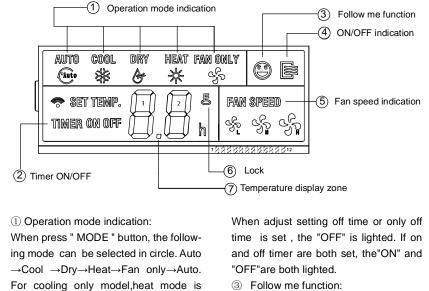


	Of Fale bour lighted.
For cooling only model, heat mode is	③ Follow me function:
skipped.	There is a temperature sensor inside the
② Timer :	wire controller, after setting temperature,
When adjust setting on time or only on	it will compare the two temperatures,
time is set, the "ON" is lighted.	and the space of wire controller will be
	2

the same as setting temperature. It is speed. available under cooling, heating, auto 6 Lock: When the " LOCK " button is pressed, mode. ④ ON/OFF indication : the icon appear and other buttons is When it is on, the icon display, unable, press again, the icon disappear. otherwise it is extinguished. ⑦ Temperature display zone: ⑤ Fan speed indication : Generally it displays setting tempera-There are four fan modes : low, middle, ture, it can be adjusted by press temperature button \blacktriangle and \blacktriangledown . But in fan high, auto. For some models, no middle fan then the middle fan is seen as high mode, no display here.

5. INSTALLATION METHOD

If there is a need of changing timer

time, press corresponding button to

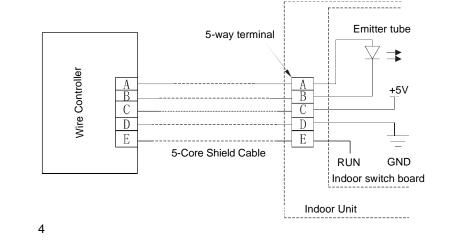

When a wire controller is needed, a small 5-way terminal should be added, fix an infrared emitter with gumwater near the receiver on the switch board. Connect its anode and cathode to A and B,and +5V, GND, RUN to C, D, E on the switch board.

• This manual gives detailed description of the precautions

• In order to ensure correct service of the wired controller please read this manual carefully before using the unit.

• For convenience of future reference, keep this manual

the air conditioner restarts after power failure.

the running status through the wired controller.

• The wired controller will reset to factory setting with auto

And this may cause inconsistent displays on the wired


mode, auto fan and 24°C(76°F) setting temperature when


controller and on the air conditioner. You need to readjust

after reading it.

that should be brought to your attention during operation.



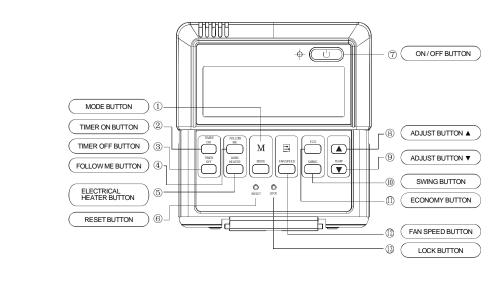

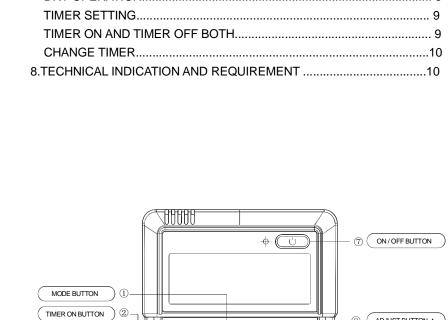

NOTE

sequence: \rightarrow AUTO \rightarrow COOL \rightarrow DRY \rightarrow HEAT \rightarrow FAN \rightarrow Remark: For the cooling only model, the heating mode is skipped. ② Timer on button : (ADJUST BUTTON ▲) Press this button, timer on function is (ADJUST BUTTON ▼) active. Then every press, the time increase 0.5h, after 10h, 1h increase-SWING BUTTON ment after each press. If cancel this Function, just set it to "0.0". ③ Timer off button: ______ FAN SPEED BUTTON Press this button, timer off function is - 13 (LOCK BUTTON active.Then every press, the time increase 0.5h, after 10h, 1h increasement after each press. If cancel this function, just set it to "0.0". ④ Follow me button / I-FEEL button: When under cool, heat and auto mode, press this button, follow me function is All the pictures in this manual are for explanation purpose only. There may be active. Press again, this function is slightly different from the wire controller you purchased(depend on model). The

ineffective.

1. SAFETY PRECAUTIONS

Meaning

severe injury.

property loss.

2. "Property loss" means loss of properties and materials.

long-term treatment but need no hospitalization

[Note]: 1. "Harm" means injury, burn and electric shock which need

following rules.

g Identifier description

Caution

Identifier

Warning

g Icon description

① Mode botton:

Icon Meaning

The following contents are stated on the product and the operation manual,

including usage, precautions against personal harm and property loss, and the

methods of using the product correctly and safely. After fully understanding the

following contents (identifiers and icons), read the text body and observe the

Means improper handling may lead to personal death or

Means improper handling may lead to personal injury or

It indicates forbidding. The forbidden subject-matter is indicated in the icon or by images or characters aside.

It indicates compulsory implementation. The compulsory subject-matter is indicated in the icon or by images or characters aside.

⑤Electrical heater button/Heater button : If press this button in heat mode, electri-When press this botton, the operation cal heater function become ineffective. mode change as the following ⑥ Reset button(hidden): Use a 1mm stick to press in the little hole , then the current setting is canceled. The wire controller enter into original state. ⑦ON/OFF button: When in off state, press this button, the indicator is on, the wire controller enter into on state, and send setting information to in door Pcb. When in on state, press this button, the indicator is off, and send instruction. If timer on or timer off has been set, it concel this setting then send instruction to stop the machine. ⑧ Adjust button ▲: Set indoor temperature up. If press and hold on, it will increase at 1°C(2°F) per 0.5 second. ⑨ Adjust button ▼ : Set indoor temperature down . if press and hold on, it will decrease at 1°C(2°F) per 0.5 second.

Please entrust the distributor or professionals to install the unit. The installers must have the relevant know-how. elegate Improper installation performed by the user without perm stallation Warning ission may cause fire, electric, shock, personal injury or water leakage. Do not spray flammable aerosol to the wire controller directly. Otherwise, fire may occur. Forbid Usage Warning Do not operate with wet hands or let water enter the wire Forbid controller. Otherwise, electric shock may occur. 2. SUMMARIZE **3. FUNCTION SUMMARY** Usage condition: Main function: 1. Power supply: 5V DC. 1. Connecting to indoor unit by A, B, C, 2. Operation temperature: D, E termina.; -15°C(-5°F)~ +43°C(+109°F). 2. Button setting action mode. 3. Operation humidity: 40%-90%, RH. 3. LCD display. 4. Timer for rest time.

Warning

2

7

8

 (i) Swing button: First press, start swing function; second press, stop swing. (Match to some model with swing function). (i) Economy operation button / Sleep button: press this button, the indoor unit operates in economy mode, press again, exit this mode (it may be ineffective for some models) (i) Fan speed button: press this button consecutively, the fan speed will circle as follow: (i) Lock button(hidden): When you push the LOCK button, all current settings are locked in and the wire controller does not accept any operation except that of the LOCK 	 J. USING METHOD AUTOMATIC OPERATION Connect to power,indoor operation lamp flash. 1. Press "MODE" button, select "AUTO "; 2. Press the button "▲" and "▼", set temperature you want, generally it is among 17°C(62°F)~30°C(88°F); 3. Press " ON/OFF" button, operation lamp is on, the air-conditioner work in auto mode, indoor fan is auto, and can not be changed. Auto is displayed on LCD. Press ON/OFF button again to stop. 4. Economy operation is valid in auto mode.
current settings are locked in and the wire controller does not accept any	mode. COOL/HEAT/FAN MODE OPERA-

3. Press "FAN SPEED" button to select 2. Press " timer " on button repeatedly to high/mid/low/auto. adjust time setting. 4. Press "ON/OFF" button, indoor unit 3. If press this button and hold on, the operation lamp on, it works in selected time will increase at 0.5h, after 10h, it mode. Press "ON/OFF" button again, it increase at 1h. stops to work. 4. After setting 0.5 second, the wire Remark: When in fan mode, no temperacontroller send timer on information, it is ture can be set. finished. Timer off only: DRY OPERATION 1. Press "TIME OFF " button, it display

 Timer off time must be longer than	8. TECHNICAL INDICA-
timer on time. 0.5 second after setting, the wire	TION AND REQUIRE-
controller send information.the setting is	MENT
finished. CHANGE TIMER	EMC and EMI comply with the CE certification requirements.

Version: MDV06U-002HW 202000100068

CONTENTS

TIMER OFF BUTTON

HEATER BUTTON

(RESET BUTTON)

6

5

actual shape shall prevail.

I-FEEL BUTTON

1. SAFETY PRECAUTION	1
2. SUMMARIZE	
3. FUNCTION SUMMARY	2
4. NAME AND FUNCTION OF INDICATORS ON THE WIRE	
CONTROLLER	3
5. INSTALLATION METHOD	
6. NAME AND OPERATION OF THE BUTTON ON THE WIRI	E CONTROL-
LER	5
7. USING METHOD	
AUTOMATIC OPERATION	
COOLING/HEATING/FAN ONLY OPERATION	8
DRY OPERATION	
TIMER SETTING	9
TIMER ON AND TIMER OFF BOTH	-
CHANGE TIMER	10
8. TECHNICAL INDICATION AND REQUIREMENT	10

 Press " MODE " button, select " DRY " mode. Press temperature adjust button to 	"SET" on LCD, and display " H " and ON, it is waiting for timer on setting. 2. Press "TIME OFF" button repeatedly	revise it. If concel timer, change timer time to 0.0.
 select setting temp. 3. Press " ON/OFF " button, indoor unit operation lamp on, it works in dry mode. Press ON/OFF button again, it stops to work. 4. In dry mode, economy operation and fan speed are ineffective. 	ON/OFF " button, indoor unit3. If press this button and hold on, the time will increase at 0.5h, after 10h, it increase at 1h.I/OFF button again, it stops to	NOTE
		The timer time is relative time,that is delay after setting time(i, e: setting time is 8:05 A,M). So when imer is set, the standard time can not be adjusted.
TIMER SETTING	TIMER ON AND TIMER OFF BOTH	
Timer on only: 1. Press " TIME ON " button, it display "SET" on LCD, and display " H " and "ON", it is waiting for timer on setting.	 Set timer on time as the correspond- ing step1 and 2. Set timer off time as the correspond- ing step1 and 2. 	
	9	10

3