
TOSHIBA FILE NO. S SERVICE MANUAL


AIR-CONDITIONER SPLIT TYPE

Indoor Unit

RAS-07BKV-E RAS-10BKV-E RAS-13BKV-E **Outdoor Unit**

RAS-07BAV-E RAS-10BAV-E RAS-13BAV-E

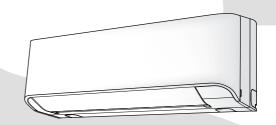

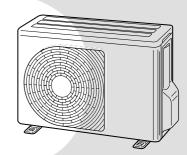



Revised on April, 2016

CONTENTS

1.	SAFETY PRECAUTIONS 3
2.	SPECIFICATIONS
3.	REFRIGERANT R410A8
4.	CONSTRUCTION VIEWS 16
5.	WIRING DIAGRAM 18
6.	SPECIFICATIONS OF ELECTRICAL PARTS 19
7.	REFRIGERANT CYCLE DIAGRAM 20
8.	CONTROL BLOCK DIAGRAM 23
9.	OPERATION DESCRIPTION
10.	INSTALLATION PROCEDURE
11.	HOW TO DIAGNOSE THE TROUBLE
12.	HOW TO REPLACE THE MAIN PARTS 88
13.	EXPLODED VIEWS AND PARTS LIST 101

1. SAFETY PRECAUTIONS

For general public use

Power supply cord of outdoor unit shall be more than 1.5 mm² (H07RN-F or 60245IEC66) polychloroprene sheathed flexible cord.

- Read this "SAFETY PRECAUTIONS" carefully before servicing.
- The precautions described below include the important items regarding safety. Observe them without fail.
- After the servicing work, perform a trial operation to check for any problem.
- Turn off the main power supply switch (or breaker) before the unit maintenance.

CAUTION

New Refrigerant Air Conditioner Installation

• THIS AIR CONDITIONER ADOPTS THE NEW HFC REFRIGERANT (R410A) WHICH DOES NOT DESTROY OZONE LAYER.

R410A refrigerant is apt to be affected by impurities such as water, oxidizing membrane, and oils because the working pressure of R410A refrigerant is approx. 1.6 times of refrigerant R22. Accompanied with the adoption of the new refrigerant, the refrigeration machine oil has also been changed. Therefore, during installation work, be sure that water, dust, former refrigerant, or refrigeration machine oil does not enter into the new type refrigerant R410A air conditioner circuit.

To prevent mixing of refrigerant or refrigerating machine oil, the sizes of connecting sections of charging port on main unit and installation tools are different from those used for the conventional refrigerant units.

Accordingly, special tools are required for the new refrigerant (R410A) units. For connecting pipes, use new and clean piping materials with high pressure fittings made for R410A only, so that water and/or dust does not enter. Moreover, do not use the existing piping because there are some problems with pressure fittings and possible impurities in existing piping.



TO DISCONNECT THE APPLIANCE FROM THE MAIN POWER SUPPLY

This appliance must be connected to the main power supply by a circuit breaker or a switch with a contact separation of at least 3 mm.

DANGER

• ASK AN AUTHORIZED DEALER OR QUALIFIED INSTALLATION PROFESSIONAL TO IN-STALL/MAINTAIN THE AIR CONDITIONER.

INAPPROPRIATE SERVICING MAY RESULT IN WATER LEAKAGE, ELECTRIC SHOCK OR FIRE.

• TURN OFF MAIN POWER SUPPLY BEFORE ATTEMPTING ANY ELECTRICAL WORK. MAKE SURE ALL POWER SWITCHES ARE OFF. FAILURE TO DO SO MAY CAUSE ELECTRIC SHOCK.

ANGER: HIGH VOLTAGE

The high voltage circuit is incorporated.

Be careful to do the check service, as the electric shock may be caused in case of touching parts on the P.C. board by hand.

- CORRECTLY CONNECT THE CONNECTING CABLE. IF THE CONNECTING CABLE IS INCOR-RECTLY CONNECTED, ELECTRIC PARTS MAY BE DAMAGED.
- CHECK THAT THE EARTH WIRE IS NOT BROKEN OR DISCONNECTED BEFORE SERVICE AND INSTALLATION. FAILURE TO DO SO MAY CAUSE ELECTRIC SHOCK.

- DO NOT INSTALL NEAR CONCENTRATIONS OF COMBUSTIBLE GAS OR GAS VAPORS. FAILURE TO FOLLOW THIS INSTRUCTION CAN RESULT IN FIRE OR EXPLOSION.
- TO PREVENT THE INDOOR UNIT FROM OVERHEATING AND CAUSING A FIRE HAZARD, PLACE THE UNIT WELL AWAY (MORE THAN 2 M) FROM HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTORS, FURNACE, STOVES, ETC.
- WHEN MOVING THE AIR-CONDITIONER FOR INSTALLATION IN ANOTHER PLACE, BE VERY CARE-FUL NOT TO ALLOW THE SPECIFIED REFRIGERANT (R410A) TO BECOME MIXED WITH ANY OTHER GASEOUS BODY INTO THE REFRIGERATION CIRCUIT. IF AIR OR ANY OTHER GAS IS MIXED IN THE REFRIGERANT, THE GAS PRESSURE IN THE REFRIGERATION CIRCUIT WILL BECOME ABNORMALLY HIGH AND IT MAY RESULT IN THE PIPE BURSTING AND POSSIBLE PER-SONNEL INJURIES.
- IN THE EVENT THAT THE REFRIGERANT GAS LEAKS OUT OF THE PIPE DURING THE SERVICE WORK AND THE INSTALLATION WORK, IMMEDIATELY LET FRESH AIR INTO THE ROOM. IF THE REFRIGERANT GAS IS HEATED, SUCH AS BY FIRE, GENERATION OF POISONOUS GAS MAY RESULT.

WARNING

- Never modify this unit by removing any of the safety guards or bypass any of the safety interlock switches.
- Do not install in a place which cannot bear the weight of the unit. Personal injury and property damage can result if the unit falls.
- After the installation work, confirm that refrigerant gas does not leak. If refrigerant gas leaks into the room and flows near a fire source, such as a cooking range, noxious gas may generate.
- The electrical work must be performed by a qualified electrician in accordance with the Installation Manual. Make sure the air conditioner uses an exclusive circuit. An insufficient circuit capacity or inappropriate installation may cause fire.
- When wiring, use the specified cables and connect the terminals securely to prevent external forces applied to the cable from affecting the terminals.
- Be sure to provide grounding. Do not connect ground wires to gas pipes, water pipes, lightning rods or ground wires for telephone cables.
- Conform to the regulations of the local electric company when wiring the power supply. Inappropriate grounding may cause electric shock.

CAUTION

- Exposure of unit to water or other moisture before installation may result in an electrical short. Do not store in a wet basement or expose to rain or water.
- Do not install in a place that can increase the vibration of the unit. Do not install in a place that can amplify the noise level of the unit or where noise or discharged air might disturb neighbors.
- To avoid personal injury, be careful when handling parts with sharp edges.
- Perform the specified installation work to guard against an earthquake. If the air conditioner is not installed appropriately, accidents may occur due to the falling unit.

For Reference:

If a heating operation would be continuously performed for a long time under the condition that the outdoor temperature is 0°C or lower, drainage of defrosted water may be difficult due to freezing of the bottom plate, resulting in a trouble of the cabinet or fan.

It is recommended to procure an antifreeze heater locally for a safe installation of the air conditioner. For details, contact the dealer.

2. SPECIFICATIONS

2-1. Specification

Unit model	Indoor			RAS-07	BKV-E	RAS-10BKV-E		
	Outdoor	Outdoor			RAS-07BAV-E		RAS-10BAV-E	
Cooling capacity (kW)					2.00		2.50	
Cooling capacity	range		0.45-2.50		0.65-3.00			
Heating capacity	5			(kW) (kW)		50		20
Heating capacity range (kW)					0.50-	-3.10	0.70	
Power supply				()		1Ph/50Hz/		
Electric	Indoor	Operation I	mode		Cooling	Heating	Cooling	Heating
characteristic		Running cu		(A)	0.20-0.18	0.22-0.20	0.21-0.19	0.23-0.21
		Power cons		(W)	28	31	30	33
		Power facto	•	(%)	64	64	65	65
	Outdoor	Operation I		(70)	Cooling	Heating	Cooling	Heating
	e diabor	Running cu		(A)	2.90-2.67	2.95-2.70	4.01-3.68	3.98-3.65
		Power con:		(¥) (W)	572	589	820	807
		Power fact	•	(%)	89	91	92	92
		Starting cu		(70) (A)	3.10	3.17	3.88	4.19
	eating)	otarting cu	icit	(7)		/4.03		-3.81
COP (Cooling / H	Indoor	High	(Cooling / Heating)	(dB-A)		/4.03	40	
Operating noise	IIIuuuu	Medium	(Cooling / Heating)	(dB-A) (dB-A)		/40 /34		/41 /33
IUISE			(Cooling / Heating)	(dB-A)		/22	23	
	Outdoor	Low (Cooling / Heating)		. ,			48	
	Outdoor (Cooling / Heating)		(dB-A)	48/50 RAS-07BKV-E				
ndoor unit	Dimension	Unit model		(RAS-10BKV-E	
	Dimension	Height		(mm) (mm)		93		93
		Width			798		798	
		Depth		(mm)	230 9		230	
	Net weight			(kg)				9
	Fan motor output			(W)		0	20 9.0/9.2	
	Air flow rate		(Cooling / Heating)	(m ³ / min)		/8.9		
Outdoor unit	Unit model				RAS-07BAV-E		RAS-10BAV-E	
	Dimension Height			(mm) (mm)	530		530 660	
			Width		660		240	
	Depth		(mm)	240				
	Net weight			(kg)	21		21	
	Compressor	Motor outp	ut	(W)	630 750		50	
		Туре			Twin rotary type with DC-invertervariable speed			trol to Single
						ith DC-inverter varia	-	
	_	Model			NX66F	OF-20D		F0F-20D
	Fan motor output			(W)			.3	
	Air flow rate		(Cooling / Heating)	(m ³ / min)	29.	/30	31	/31
Piping	Туре						nnection	
connection	Indoor unit	Liquid side		(mm)		0.35		6.35
		Gas side		(mm)		9.52		9.52
	Outdoor unit	Liquid side		(mm)		0.35	Ø6.35	
		Gas side		(mm)		9.52		9.52
	Maximum length			(m)		5		5
		Maximum charge-less length		(m)	15		15	
	Maximum height difference		(m)		2	12		
Refrigerant	Name of refrigera	nt				10A		10A
	Weight	T		(kg)	0.	48		.52
Wiring		Power sup	oly			3 Wires: Includes	s earth (Outdoor)	
connection		Interconne	ction				cludes earth	
Usable temperature range		Indoor	(Cooling / Heating)	(°C)	21-32	2/0-28	21-32/0-28	
			(Cooling / Heating)			-15,24	-15,46	


* The specification may be subject to change without notice for purpose of improvement.

2-2. Specification


Unit model	Indoor				DAS 120		
Unit model	Outdoor				RAS -13BKV-E RAS -13BAV-E		
Cooling consoit	Outdoor				3.10		
Cooling capacity (kW)					0.75-3.50		
Cooling capacity range (kW)							
Heating capacity				(kW)	3.60		
Heating capacity r	range			(kW)	0.70-4.5		
Power supply					1Ph/50Hz/22		
Electric	Indoor	Operation n		(1)	Cooling	Heating	
characteristic		Running cu		(A)	0.22-0.20	0.23-0.21	
		Power cons		(W)	34	35	
	0.11	Power facto		(%)	70	69	
	Outdoor	Operation n		(4)	Cooling	Heating	
		Running cu		(A)	5.38-4.95	4.52-4.14	
		Power cons	•	(W)	1116	925	
		Power facto		(%)	94	93	
		Starting cur	rent	(A)	5.60	4.75	
COP (Cooling / He		115-5	(Oppling (11) - floor)	(-15. A)	2.70/3.		
Operating	Indoor	High	(Cooling / Heating)	(dB-A)	41/42		
noise		Medium	(Cooling / Heating)	(dB-A)	33/34		
	0.11	Low	(Cooling / Heating)	(dB-A)	24/24		
	Outdoor	(6 6)		(dB-A)	48/50		
Indoor unit	Unit model	11.5.1.4		(RAS-13BKV-E		
	Dimension	Height		(mm)	293		
		Width		(mm)	798		
		Depth		(mm)	230		
	Net weight	-		(kg)	9		
	Fan motor output			(W) (m ³ / min)	22		
<u> </u>		Air flow rate (Cooling / Heating)			10.0/10		
Outdoor unit	Unit model			(mm)	RAS-13B/	AV-E	
	Dimension	Height	Width		530		
					660		
		Depth		(mm)	240		
	Net weight	M . ((kg)	22		
	Compressor	Motor outpu	It	(W)	750		
		Туре			Twin rotary type with DC-inverterve rotary type with DC-inverter variab		
		Model			NX89F0F	-20D	
	Fan motor output			(W)	43		
	Air flow rate		(Cooling / Heating)	(m ³ / min)	33/33	3	
Piping	Туре				Flare conn	ection	
connection	Indoor unit	Liquid side		(mm)	Ø6.3	5	
		Gas side		(mm)	Ø9.53	2	
	Outdoor unit	Liquid side		(mm)	Ø6.3	5	
		Gas side		(mm)	Ø9.52	2	
	Maximum length	Maximum length			15		
	Maximum charge-	Maximum charge-less length			15		
	Maximum height difference			(m)	12		
Refrigerant	Name of refrigerar	nt			R410	A	
	Weight			(kg)	0.58		
Wiring		Power supp	ly		3 Wires: Includes e	arth (Outdoor)	
connection		Interconnec	tion		4 Wires: Includ	des earth	
Usable temperatu	re range	Indoor	(Cooling / Heating)	(C)	21-32/0-	-28	
		Outdoor	(Cooling / Heating)	(C)	-15,46/-1	5,24	

* The specification may be subject to change without notice for purpose of improvement.

2-2. Operation Characteristic Curve

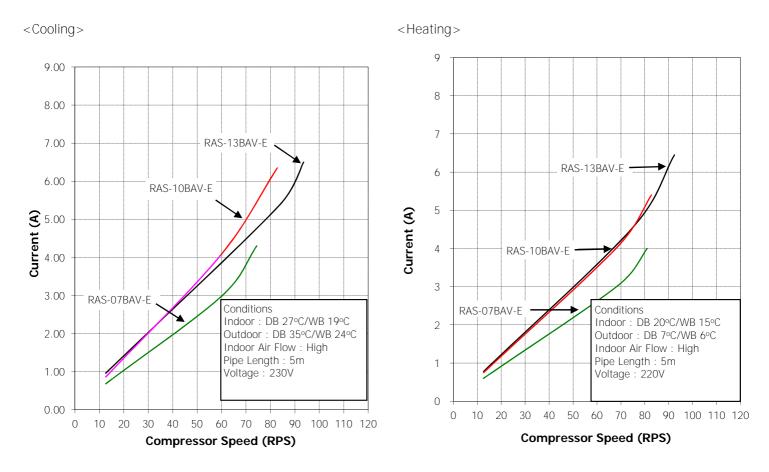

2-3. Capacity Variation ratio According to Temperature.

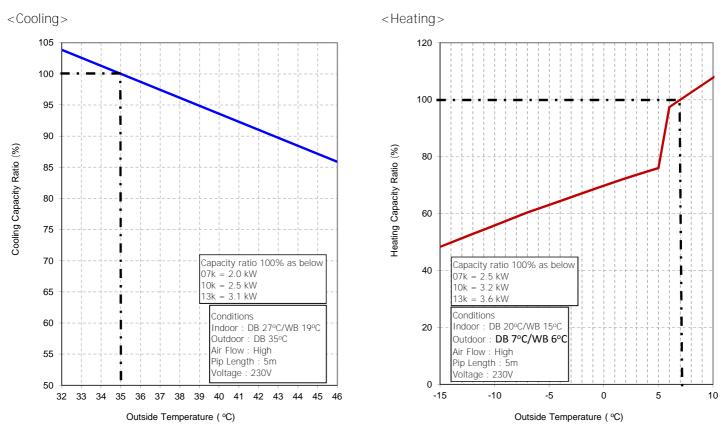

3. REFRIGERANT R410A

This air conditioner adopts the new refrigerant HFC (R410A) which does not damage the ozone layer.

The working pressure of the new refrigerant R410A is 1.6 times higher than conventional refrigerant (R22). The refrigerating oil is also changed in accordance with change of refrigerant, so be careful that water, dust, and existing refrigerant or refrigerating oil are not entered in the refrigerant cycle of the air conditioner using the new refrigerant during installation work or servicing time.

The next section describes the precautions for air conditioner using the new refrigerant. Conforming to contents of the next section together with the general cautions included in this manual, perform the correct and safe work.

3-1. Safety During Installation/Servicing

As R410A's pressure is about 1.6 times higher than that of R22, improper installation/servicing may cause a serious trouble. By using tools and materials exclusive for R410A, it is necessary to carry out installation/servicing safely while taking the following precautions into consideration.

 Never use refrigerant other than R410A in an air conditioner which is designed to operate with R410A.

If other refrigerant than R410A is mixed, pressure in the refrigeration cycle becomes abnormally high, and it may cause personal injury, etc. by a rupture.

- Confirm the used refrigerant name, and use tools and materials exclusive for the refrigerant R410A. The refrigerant name R410A is indicated on the visible place of the outdoor unit of the air conditioner using R410A as refrigerant. To prevent mischarging, the diameter of the service port differs from that of R22.
- If a refrigeration gas leakage occurs during installation/servicing, be sure to ventilate fully.
 If the refrigerant gas comes into contact with fire, a poisonous gas may occur.
- 4. When installing or removing an air conditioner, do not allow air or moisture to remain in the refrigeration cycle. Otherwise, pressure in the refrigeration cycle may become abnormally high so that a rupture or personal injury may be caused.
- 5. After completion of installation work, check to make sure that there is no refrigeration gas leakage.

If the refrigerant gas leaks into the room, coming into contact with fire in the fan-driven heater, space heater, etc., a poisonous gas may occur.

- When an air conditioning system charged with a large volume of refrigerant is installed in a small room, it is necessary to exercise care so that, even when refrigerant leaks, its concentration does not exceed the marginal level.
 If the refrigerant gas leakage occurs and its concentration exceeds the marginal level, an
- oxygen starvation accident may result.
 7. Be sure to carry out installation or removal according to the installation manual. Improper installation may cause refrigeration trouble, water leakage, electric shock, fire, etc.
- 8. Unauthorized modifications to the air conditioner may be dangerous. If a breakdown occurs please call a qualified air conditioner technician or electrician.

Improper repair's may result in water leakage, electric shock and fire, etc.

3-2. Refrigerant Piping Installation

3-2-1. Piping Materials and Joints Used

For the refrigerant piping installation, copper pipes and joints are mainly used. Copper pipes and joints suitable for the refrigerant must be chosen and installed. Furthermore, it is necessary to use clean copper pipes and joints whose interior surfaces are less affected by contaminants.

1. Copper Pipes

It is necessary to use seamless copper pipes which are made of either copper or copper alloy and it is desirable that the amount of residual oil is less than 40 mg/10 m. Do not use copper pipes having a collapsed, deformed or discolored portion (especially on the interior surface).

Otherwise, the expansion valve or capillary tube may become blocked with contaminants.

As an air conditioner using R410A incurs pressure higher than when using R22, it is necessary to choose adequate materials.

Thicknesses of copper pipes used with R410A are as shown in Table 3-2-1. Never use copper pipes thinner than 0.8 mm even when it is available on the market.

		Thickne	ss (mm)
Nominal diameter	Outer diameter (mm)	R410A	R22
1/4	6.35	0.80	0.80
3/8	9.52	0.80	0.80
1/2	12.70	0.80	0.80
5/8	15.88	1.00	1.00

Table 3-2-1 Thicknesses of annealed copper pipes

2. Joints

For copper pipes, flare joints or socket joints are used. Prior to use, be sure to remove all contaminants.

a) Flare Joints

Flare joints used to connect the copper pipes cannot be used for pipings whose outer diameter exceeds 20 mm. In such a case, socket joints can be used.

Sizes of flare pipe ends, flare joint ends and flare nuts are as shown in Tables 3-2-3 to 3-2-6 below. b) Socket Joints

Socket joints are such that they are brazed for connections, and used mainly for thick pipings whose diameter is larger than 20 mm.

Thicknesses of socket joints are as shown in Table 3-2-2.

Nominal diameter	Reference outer diameter of copper pipe jointed (mm)	Minimum joint thickness (mm)
1/4	6.35	0.50
3/8	9.52	0.60
1/2	12.70	0.70
5/8	15.88	0.80

Table 3-2-2 Minimum thicknesses of socket joints

3-2-2. Processing of Piping Materials

When performing the refrigerant piping installation, care should be taken to ensure that water or dust does not enter the pipe interior, that no other oil than lubricating oils used in the installed air-water heat pump is used, and that refrigerant does not leak. When using lubricating oils in the piping processing, use such lubricating oils whose water content has been removed. When stored, be sure to seal the container with an airtight cap or any other cover.

1. Flare processing procedures and precautions

a) Cutting the Pipe

By means of a pipe cutter, slowly cut the pipe so that it is not deformed.

b) Removing Burrs and Chips

If the flared section has chips or burrs, refrigerant leakage may occur. Carefully remove all burrs and clean the cut surface before installation.

c) Insertion of Flare Nut

d) Flare Processing

Make certain that a clamp bar and copper pipe have been cleaned.

By means of the clamp bar, perform the flare processing correctly.

Use either a flare tool for R410A or conventional flare tool.

Flare processing dimensions differ according to the type of flare tool. When using a conventional flare tool, be sure to secure "dimension A" by using a gauge for size adjustment.




Fig. 3-2-1 Flare processing dimensions

Table 3-2-3 Dimensions related to flare processing for R410A

	Quatar			A (mm)		
Nominal diameter	Outer diameter	Thickness (mm)	Flare tool for R410A	Conventional flare tool		
	(mm)		clutch type	Clutch type	Wing nut type	
1/4	6.35	0.8	0 to 0.5	1.0 to 1.5	1.5 to 2.0	
3/8	9.52	0.8	0 to 0.5	1.0 to 1.5	1.5 to 2.0	
1/2	12.70	0.8	0 to 0.5	1.0 to 1.5	2.0 to 2.5	
5/8	15.88	1.0	0 to 0.5	1.0 to 1.5	2.0 to 2.5	

Table 3-2-4 Dimensions related to flare processing for R22

	Quitar			A (mm)	
Nominal diameter	Outer diameter	Thickness (mm)	Flare tool for R22	Conventional flare tool	
	(mm)		clutch type	Clutch type	Wing nut type
1/4	6.35	0.8	0 to 0.5	0.5 to 1.0	1.0 to 1.5
3/8	9.52	0.8	0 to 0.5	0.5 to 1.0	1.0 to 1.5
1/2	12.70	0.8	0 to 0.5	0.5 to 1.0	1.5 to 2.0
5/8	15.88	1.0	0 to 0.5	0.5 to 1.0	1.5 to 2.0

Table 3-2-5 Flare and flare nut dimensions for R410A

Nominal	Outer diameter	Outer diameter Thickness)imensi	on (mm	Flare nut width	
diameter	(mm)	(mm)	Α	В	С	D	(mm)
1/4	6.35	0.8	9.1	9.2	6.5	13	17
3/8	9.52	0.8	13.2	13.5	9.7	20	22
1/2	12.70	0.8	16.6	16.0	12.9	23	26
5/8	15.88	1.0	19.7	19.0	16.0	25	29

Nominal	Outer diameter	Thickness	C	imensi	on (mm	I)	Flare nut width
diameter	(mm)	(mm)	Α	В	С	D	(mm)
1/4	6.35	0.8	9.0	9.2	6.5	13	17
3/8	9.52	0.8	13.0	13.5	9.7	20	22
1/2	12.70	0.8	16.2	16.0	12.9	20	24
5/8	15.88	1.0	19.7	19.0	16.0	23	27
3/4	19.05	1.0	23.3	24.0	19.2	34	36

Table 3-2-6 Flare and flare nut dimensions for R22

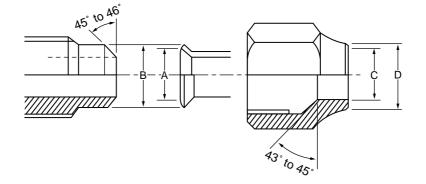


Fig. 3-2-2 Relations between flare nut and flare seal surface

2. Flare Connecting Procedures and Precautions

- a) Make sure that the flare and union portions do not have any scar or dust, etc.
- b) Correctly align the processed flare surface with the union axis.
- c) Tighten the flare with designated torque by means of a torque wrench. The tightening torque for R410A is the same as that for conventional R22. Incidentally, when the torque is weak, the gas leakage may occur. When it is strong, the flare nut may crack and may be made non-removable. When choosing the tightening torque, comply with values designated by manufacturers. Table 3-2-7 shows reference values.

NOTE :

When applying oil to the flare surface, be sure to use oil designated by the manufacturer. If any other oil is used, the lubricating oils may deteriorate and cause the compressor to burn out.

Nominal diameter	Outer diameter (mm)	Tightening torque N•m (kgf•cm)	Tightening torque of torque wrenches available on the market N•m (kgf•cm)
1/4	6.35	14 to 18 (140 to 180)	16 (160), 18 (180)
3/8	9.52	33 to 42 (330 to 420)	42 (420)
1/2	12.70	50 to 62 (500 to 620)	55 (550)
5/8	15.88	63 to 77 (630 to 770)	65 (650)

Table 3-2-7 Tightening torque of flare for R410A [Reference values]

3-3. Tools

3-3-1. Required Tools

The service port diameter of packed valve of the outdoor unit in the air-water heat pump using R410A is changed to prevent mixing of other refrigerant. To reinforce the pressure-resisting strength, flare processing dimensions and opposite side dimension of flare nut (For Ø12.7 copper pipe) of the refrigerant piping are lengthened.

The used refrigerating oil is changed, and mixing of oil may cause a trouble such as generation of sludge, clogging of capillary, etc. Accordingly, the tools to be used are classified into the following three types.

- 1. Tools exclusive for R410A (Those which cannot be used for conventional refrigerant (R22))
- 2. Tools exclusive for R410A, but can be also used for conventional refrigerant (R22)
- 3. Tools commonly used for R410A and for conventional refrigerant (R22)

The table below shows the tools exclusive for R410A and their interchangeability.

		ive for R410A (The							
Tools whose specifications are changed for R410A and their interchangeability									
				410A pump installation	Conventional air-water heat pump installation				
No.	Used tool	Usage	Existence of new equipment for R410A	Whether conven- tional equipment can be used	Whether new equipment can be used with conventional refrigerant				
1	Flare tool	Pipe flaring	Yes	*(Note 1)	0				
2	Copper pipe gauge for adjusting projection margin	Flaring by conventional flare tool	Yes	*(Note 1)	*(Note 1)				
3	Torque wrench (For Ø12.7)	Connection of flare nut	Yes	×	×				
4	Gauge manifold	Evacuating, refrigerant	Maria						
5	Charge hose	charge, run check, etc.	Yes	×	×				
6	Vacuum pump adapter	Vacuum evacuating	Yes	×	0				
7	Electronic balance for refrigerant charging	Refrigerant charge	Yes	×	0				
8	Refrigerant cylinder	Refrigerant charge	Yes	×	×				
9	Leakage detector	Gas leakage check	Yes	×	0				
10	Charging cylinder	Refrigerant charge	(Note 2)	×	×				

(Note 1) When flaring is carried out for R410A using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

(Note 2) Charging cylinder for R410A is being currently developed.

General tools (Conventional tools can be used.)

In addition to the above exclusive tools, the following equipments which serve also for R22 are necessary as the general tools.

- 1. Vacuum pump Use vacuum pump by attaching vacuum pump adapter.
- 2. Torque wrench (For Ø6.35, Ø9.52)
- 3. Pipe cutter

- 4. Reamer
- 5. Pipe bender

- 6. Level vial

3. Insulation resistance tester

- 7. Screwdriver (+, -)8. Spanner or Monkey wrench
- 9. Hole core drill (Ø65)
- 10. Hexagon wrench (Opposite side 4mm)
- 11. Tape measure
- 12. Metal saw


Also prepare the following equipments for other installation method and run check.

- 1. Clamp meter
- 2. Thermometer

4. Electroscope

3-4. Recharging of Refrigerant

When it is necessary to recharge refrigerant, charge the specified amount of new refrigerant according to the following steps.

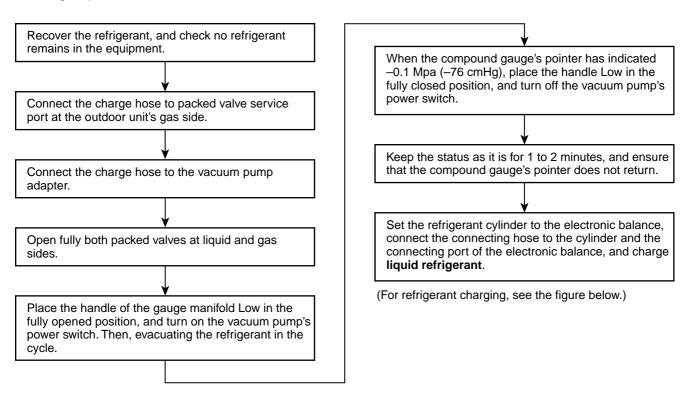

- 1. Never charge refrigerant exceeding the specified amount.
- 2. If the specified amount of refrigerant cannot be charged, charge refrigerant bit by bit in COOL mode.
- 3. Do not carry out additional charging.

When additional charging is carried out if refrigerant leaks, the refrigerant composition changes in the refrigeration cycle, that is characteristics of the air conditioner changes, refrigerant exceeding the specified amount is charged, and working pressure in the refrigeration cycle becomes abnormally high pressure, and may cause a rupture or personal injury.


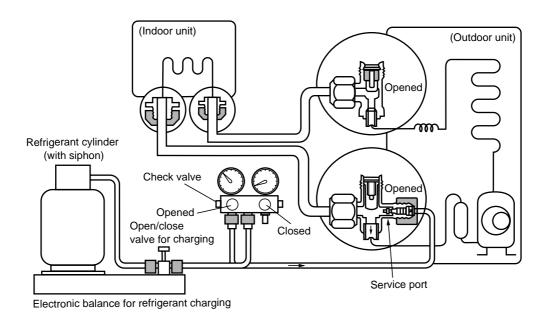



Fig. 3-4-1 Configuration of refrigerant charging

- 1. Be sure to make setting so that liquid can be charged.
- 2. When using a cylinder equipped with a siphon, liquid can be charged without turning it upside down.

It is necessary for charging refrigerant under condition of liquid because R410A is mixed type of refrigerant. Accordingly, when charging refrigerant from the refrigerant cylinder to the equipment, charge it turning the cylinder upside down if cylinder is not equipped with siphon.

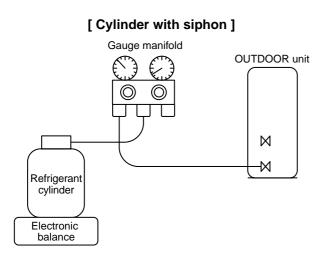

R410A refrigerant is HFC mixed refrigerant. Therefore, if it is charged with gas, the composition of the charged refrigerant changes and the characteristics of the equipment varies.

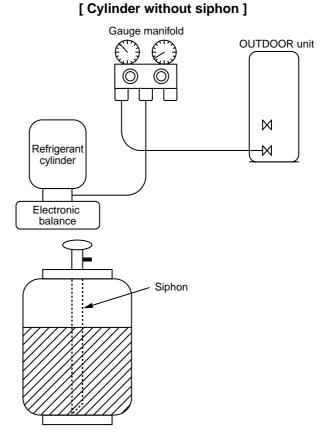



3-5. Brazing of Pipes

3-5-1. Materials for Brazing

1. Silver brazing filler

Silver brazing filler is an alloy mainly composed of silver and copper. It is used to join iron, copper or copper alloy, and is relatively expensive though it excels in solderability.

2. Phosphor bronze brazing filler

Phosphor bronze brazing filler is generally used to join copper or copper alloy.

3. Low temperature brazing filler

Low temperature brazing filler is generally called solder, and is an alloy of tin and lead. Since it is weak in adhesive strength, do not use it for refrigerant pipes.

- Phosphor bronze brazing filler tends to react with sulfur and produce a fragile compound water solution, which may cause a gas leakage. Therefore, use any other type of brazing filler at a hot spring resort, etc., and coat the surface with a paint.
- 2. When performing brazing again at time of servicing, use the same type of brazing filler.

3-5-2. Flux

1. Reason why flux is necessary

- By removing the oxide film and any foreign matter on the metal surface, it assists the flow of brazing filler.
- In the brazing process, it prevents the metal surface from being oxidized.
- By reducing the brazing filler's surface tension, the brazing filler adheres better to the treated metal.

2. Characteristics required for flux

- Activated temperature of flux coincides with the brazing temperature.
- Due to a wide effective temperature range, flux is hard to carbonize.
- It is easy to remove slag after brazing.
- The corrosive action to the treated metal and brazing filler is minimum.
- It excels in coating performance and is harmless to the human body.

As the flux works in a complicated manner as described above, it is necessary to select an adequate type of flux according to the type and shape of treated metal, type of brazing filler and brazing method, etc.

3. Types of flux

Noncorrosive flux

Generally, it is a compound of borax and boric acid.

It is effective in case where the brazing temperature is higher than 800°C.

Activated flux

Most of fluxes generally used for silver brazing are this type.

It features an increased oxide film removing capability due to the addition of compounds such as potassium fluoride, potassium chloride and sodium fluoride to the borax-boric acid compound.

4. Piping materials for brazing and used brazing filler/flux

Piping material	Used brazing filler	Used flux
Copper - Copper	Phosphor copper	Do not use
Copper - Iron	Silver	Paste flux
Iron - Iron	Silver	Vapor flux

- 1. Do not enter flux into the refrigeration cycle.
- 2. When chlorine contained in the flux remains within the pipe, the lubricating oil deteriorates. Therefore, use a flux which does not contain chlorine.
- 3. When adding water to the flux, use water which does not contain chlorine (e.g. distilled water or ion-exchange water).
- 4. Remove the flux after brazing.

3-5-3. Brazing

As brazing work requires sophisticated techniques, experiences based upon a theoretical knowledge, it must be performed by a person qualified.

In order to prevent the oxide film from occurring in the pipe interior during brazing, it is effective to proceed with brazing while letting dry Nitrogen gas (N2) flow.

Never use gas other than Nitrogen gas.

1. Brazing method to prevent oxidation

- 1) Attach a reducing valve and a flow-meter to the Nitrogen gas cylinder.
- 2) Use a copper pipe to direct the piping material, and attach a flow-meter to the cylinder.
- Apply a seal onto the clearance between the piping material and inserted copper pipe for Nitrogen in order to prevent backflow of the Nitrogen gas.
- 4) When the Nitrogen gas is flowing, be sure to keep the piping end open.
- Adjust the flow rate of Nitrogen gas so that it is lower than 0.05 m³/Hr or 0.02 MPa (0.2kgf/cm²) by means of the reducing valve.
- 6) After performing the steps above, keep the Nitrogen gas flowing until the pipe cools down to a certain extent (temperature at which pipes are touchable with hands).
- 7) Remove the flux completely after brazing.



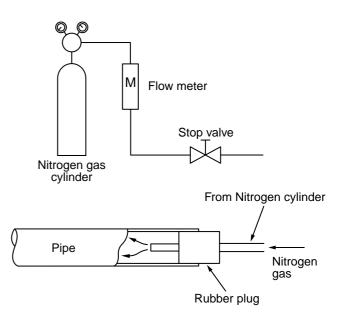



Fig. 3-5-1 Prevention of oxidation during brazing

4. CONSTRUCTION VIEWS

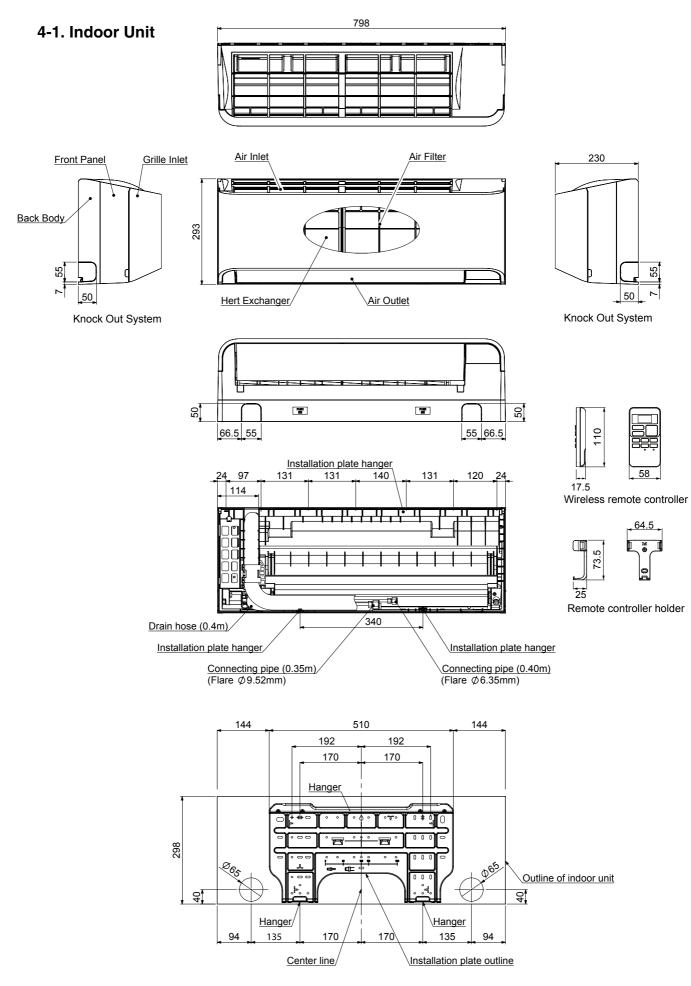

4-2. Outdoor Unit

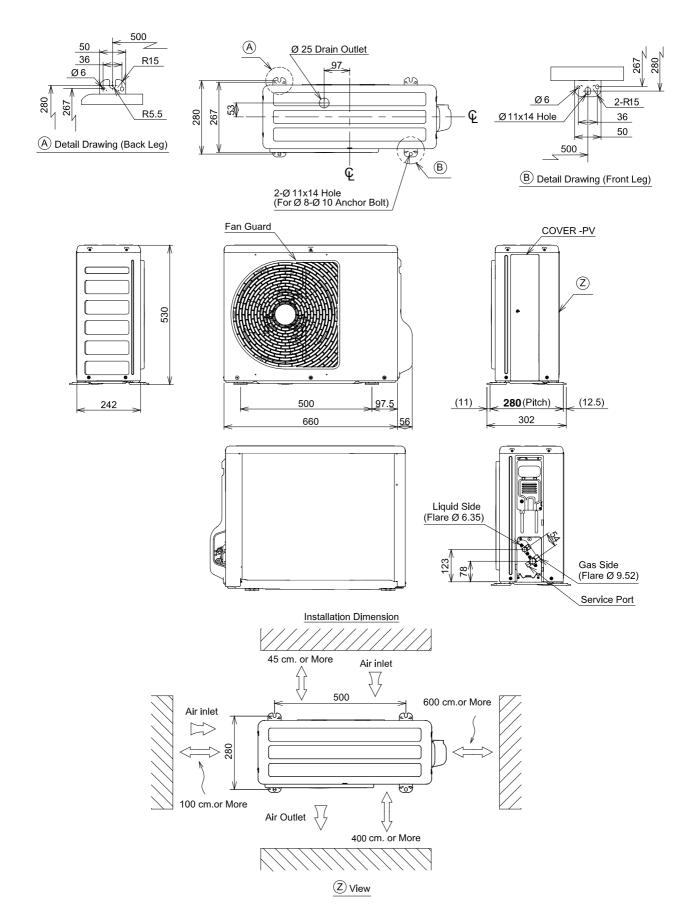

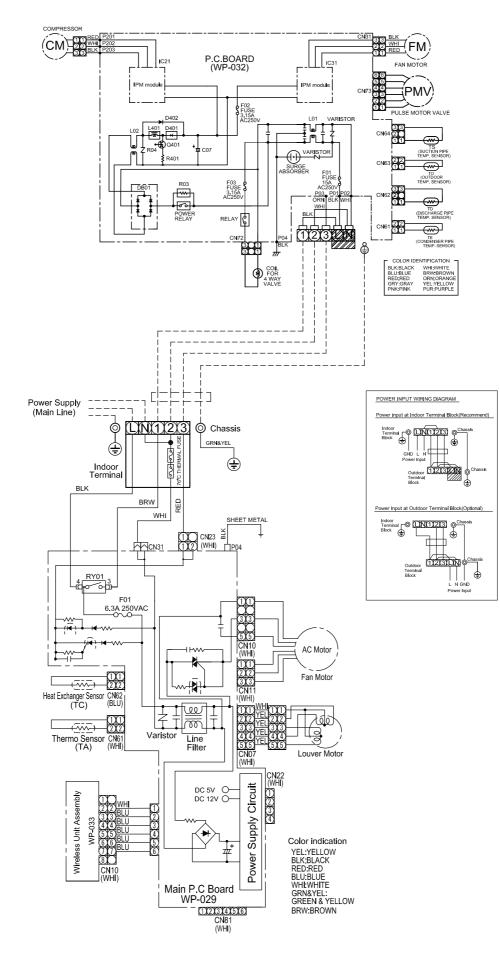

5. WIRING DIAGRAM

6. SPECIFICATIONS OF ELECTRICAL PARTS

6-1. Indoor Unit


No.	Parts name	Туре	Specifications
1	Fan motor (for indoor)	SJM-240-25	AC 220~240V, 25W
2	Room temp. sensor (TA-sensor)	(-)	10kΩ at 25°C
3	Heat exchanger temp. sensor (TC-sensor)	(-)	10kΩ at 25°C
4	Louver motor	24BYJ48A-080	Output (Rated) 4 phase, DC12V

6-2. Outdoor Unit


No.	Parts name		Type name	Specifications
1	Compressor	RAS-07BAV-E	NX66F0F-20D	3-Phases (6-Poles) ; 630W
		RAS-10BAV-E		3-Phases (6-Poles) ; 750W
		RAS-13BAV-E	NX89F0F-20D	3-r mases (0-r 01es), 7 30 W
2	Fan Motor		WDF-340-A43-1	DC 140-340V, 43W
3	Pulse Modulating Valve (PMV) coil		PQ-M10012-000313	DC 12V
4	4-Way Valve coil		DXQ-939	AC 220-240V
5	Suction temp. sensor	(TS sensor)	(Inverter attached)	10kΩ at 25°C
6	Discharge temp. sensor	(TD sensor)	(Inverter attached)	62kΩ at 20°C
7	Outside air temp. sensor	(TO sensor)	(Inverter attached)	10kΩ at 25°C
8	Heat Exchanger temp. sensor	(TE sensor)	(Inverter attached)	10kΩ at 25°C
9	Terminal block	(5 poles)	JXO-5B	AC 250V, 20A

7. REFRIGERANT CYCLE DIAGRAM

7-1. Refrigerant Cycle Diagram RAS-07BKV-E / RAS-07BAV-E

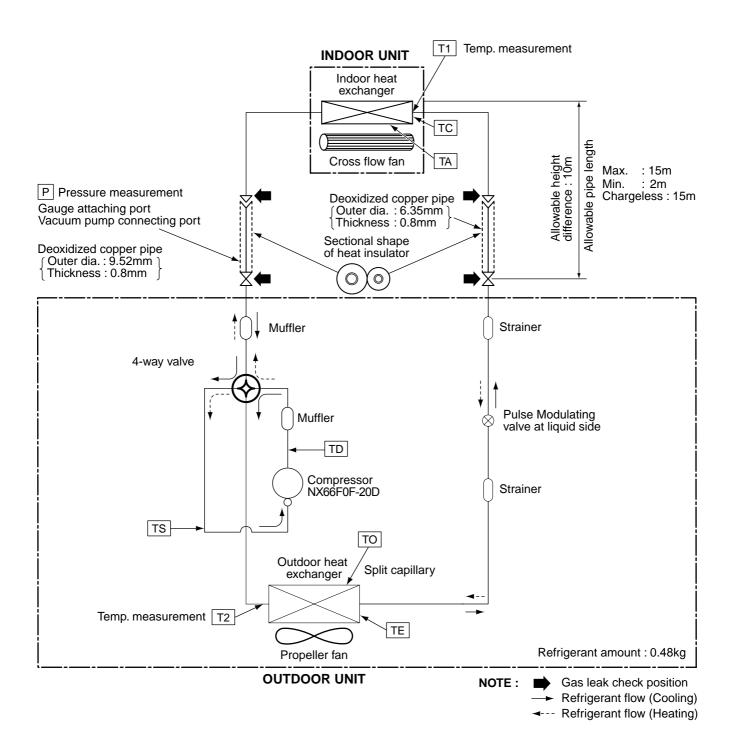

RAS-10BKV-E / RAS-10BAV-E RAS-13BKV-E / RAS-13BAV-E

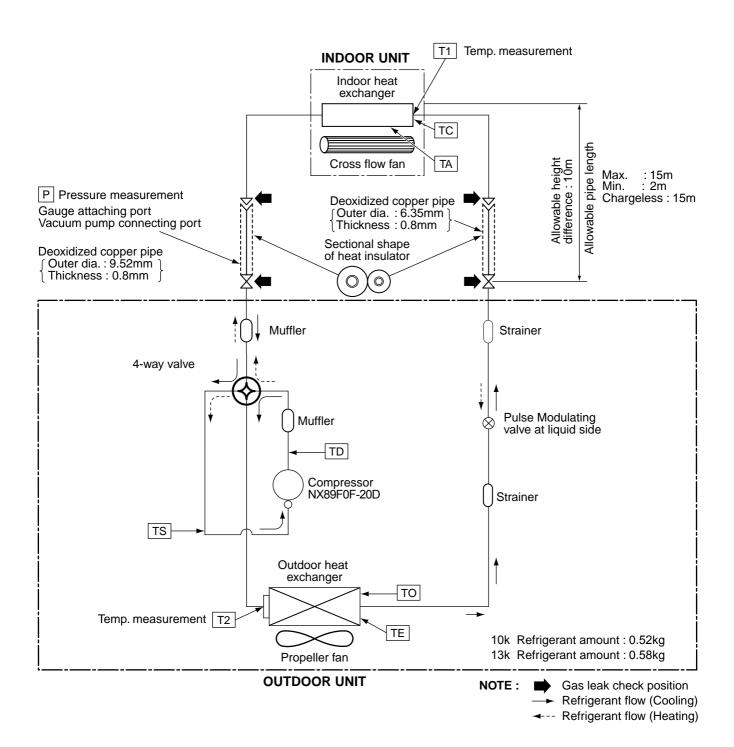

7-2. Operation Data

<Cooling>

•	eature ion(°C)	Model name RAS-	Standard pressure	Heat exchanger pipe temp.		Indoor fan mode	Outdoor fan mode	Compressor revolution	
Indoor	Outdoor		P (MPa)	T1 (°C)	T2 (°C)			(rps)	
27/19	35/-	07BKV-E	0.9 to 1.1	12 to 13	47 to 48	High	High	60	
		10BKV-E	0.8 to 1.0	11 to 12	52 to 53	High	High	60	
		13BKV-E	0.7 to 0.9	11 to 12	49 to 50	High	High	84	


<Heating>

	eature ion(°C)	Model name RAS-	Standard pressure		changer temp.	Indoor fan mode	Outdoor fan mode	Compressor revolution	
Indoor	Outdoor		P (MPa)	T1 (°C)	T2 (°C)			(rps)	
20/-	7/6	07BKV-E	2.3 to 2.4	35 to 36	0 to 1	High	High	69	
		10BKV-E	2.5 to 2.7	42 to 43	0 to 1	High	High	69	
		13BKV-E	2.6 to 2.7	43 to 44	0 to 1	High	High	75	


NOTES :


- 1. Measure surface temperature of heat exchanger pipe around center of heat exchanger path U bent. (Thermistor themometer)
- 2. Connecting piping condition : 5 m


8. CONTROL BLOCK DIAGRAM

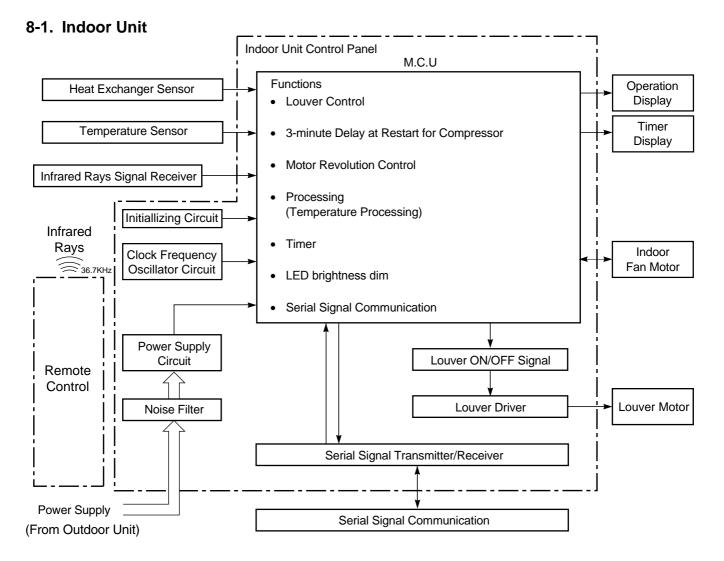

REMOTE CONTROL

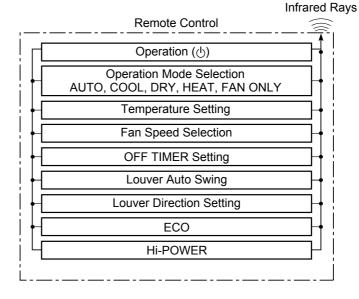



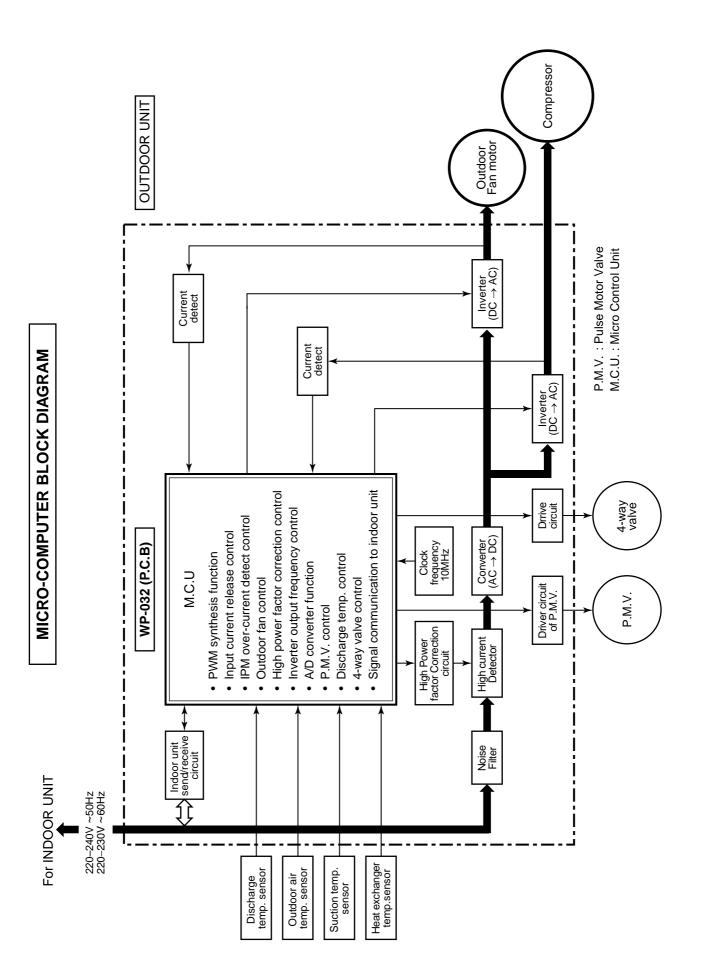

9. OPERATION DESCRIPTION

9-1. Outline of Air Conditioner Control

This air conditioner is a capacity-variable type air conditioner. Its system can control the speed of compressor motor according to load. The drive circuit for the indoor motor is mounted in the indoor unit. The drive circuits for outdoor motor and compressor are mounted in the outdoor unit.

The entire air conditioner is mainly controlled by the indoor unit controller. The indoor unit controller drives the indoor fan motor based upon command sent from the remote controller. Moreover, it also determines required speed of compressor motor and then transfers the operation command to the outdoor unit controller.

The outdoor unit controller erceives operation command from the indoor unit and controls revolution speed of the compressor motor.

The outdoor unit controller controls speed of compressor motor be controlling output voltage of the inverter and switching timing of supply power (current transfer timing), so that compressor motor operates according to the operation command. And then, the outdoor unit controller transfers the operating status back to the indoor unit controller.

As the compressor adopts four-pole brushless DC motor, the frequency of the supply power from inverter to compressor is two-times cycles of the actual number of revolution.

1. Role of indoor unit controller

The indoor unit controller judges the operation commands from the remote controller and assumes the following functions.

- Judgment of suction air temperature of the indoor heat exchanger by using the indoor temp. sensor. (TA sensor)
- Judgment of the indoor heat exchanger temperature by using heat exchanger sensor (TC sensor) (Prevent-freezing control, etc.)
- · Louver motor control
- · Indoor fan motor operation control
- LED (Light Emitting Diode) display control
- Transferring of operation command signal (Serial signal) to the outdoor unit
- Reception of information of operation status (Serial signal including outside temp. data) from the outdoor unit and judgment/display of error

2. Role of outdoor unit controller

Receiving the operation command signal (Serial signal) from the indoor unit controller, the outdoor unit performs compressor operation control as followed to judgment of serial signal from indoor side.

- Detection of inverter input current and current release operation
- Over-current detection and prevention operation to IGBT module (Compressor stop function)
- Compressor and outdoor fan stop function when serial signal is off (when the serial signal does not reach the board assembly of outdoor control by trouble of the signal system)
- Transferring of operation information (Serial signal) from outdoor unit controller to indoor unit controller
- Detection of outdoor temperature and operation revolution control
- 3. Contents of operation command signal (Serial signal) from indoor unit controller to outdoor unit controller

The following three types of signals are sent from the indoor unit controller.

- Operation mode set on the remote controller
- Compressor revolution command signal defined by indoor temperature and set temperature (Correction along with variation of room temperature and correction of indoor heat exchanger temperature are added.)
- Temperature of indoor heat exchanger
- For these signals ([Operation mode] and [Compressor revolution] indoor heat exchanger temperature), the outdoor unit controller monitors the input current to the inverter, and performs the followed operation within the range that current does not exceed the allowable value.

4. Contents of operation command signal (Serial signal) from outdoor unit controller to indoor unit controller

The following signals are sent from the outdoor unit controller.


- The current operation mode
- The current compressor revolution
- Outdoor temperature
- Existence of protective circuit operation
 For transferring of these signals, the indoor unit controller monitors the contents of signals, and judges existence of trouble occurrence.
 Contents of judgment are described below.
 - Whether distinction of the current operation status meets to the operation command signal
 - Whether protective circuit operates When no signal is received from the outdoor unit controller, it is assumed as a trouble.

9-2. Operation Description

9-3.

9-4.

1.	Basic operation	. 27
	1. Operation control	. 27
	2. Cooling/Heating operation	. 28
	3. AUTO operation	28
	4. DRY operation	28
2.	Indoor fan motor control	. 29
3.	Outdoor fan motor control	. 31
4.	Capacity control	32
5.	Current release control	. 32
6.	Release protective control by temperature of indoor heat exchanger	. 33
7.	Defrost control (Only in heating operation)	
8.	Louver control	
	1) Louver position	
	2) Air direction adjustment	
	3) Swing	. 35
9.	ECO operation	
10.	Temporary operation	
11.	Discharge temperature control	. 37
12.	Pulse Modulating valve (P.M.V.) control	. 38
13.	Self-Cleaning function	. 39
	Remote-A or B selection	
15.	Hi-POWER Mode	41
Auto	Restart Function	
9-3-1.	How to Set the Auto Restart Function	. 42
9-3-2.	How to Cancel the Auto Restart Function	43
9-3-3.	Power Failure During Timer Operation	43
Remo	ote Controller and Its Fuctions	
9-4-1.	Parts Name of Remote Controller	45
9-4-2.	Operation of remote control	. 45
9-4-3.	Name and Functions of Indications on Remote Controller	46

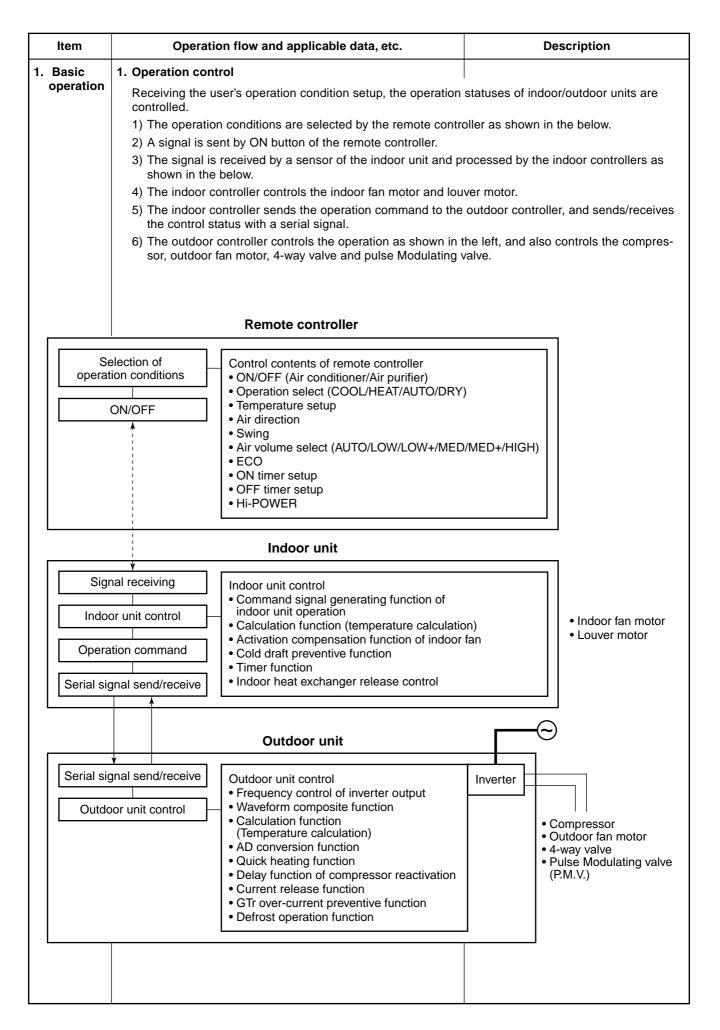

ltem	Operation flow and appli	cable data, etc.	Description				
1. Basic	2. Cooling/Heating operation						
operation		• • •	ols according to cooling/heating conditions.				
	 Receiving the operation ON s starts being transferred form t 		oller, the cooling or heating operation signal e outdoor unit.				
			rding to the contents of " 2. Indoor fan ts of " 9. Louver control ", respectively.				
		essor, pulse Modulating valve and					
	4-way valve according to the	h the indoor unit.					
	Operation ON	Setup of remote controlle	Pr				
		Indoor fan motor control	/ Louver control / Operation Hz				
		Control (Requierment)					
	Sending of operation command	signal					
		Compressor revolution of	ontrol / Outdoor fan motor control /				
		Operation Hz control (Inc	clude limit control)				
	Outdoor unit control	Lin	cooling operation: OFF] heating operation: ON]				
		Pulse Modulating valve c					
	3. AUTO operation		1) Detects the room temperature (Ta) when the operation started.				
	Selection of operation mode As shown in the following figure,		2) Selects an operation mode from Ta in				
	selecting automatically the statu (Ta) when starting AUTO operati	s of room temperature on.	the left figure. 3) Fan operation continues until an				
	*1. When reselecting the opera speed is controlled by the p		operation mode is selected.				
	speed is controlled by the p	revious operation mode.	 When AUTO operation has started within 2 hours after heating operation 				
	Та		stopped and if the room temperature is 20°C or more, the fan operation is performed with "Super Ultra LOW" mode for 3 minutes. Then, select an operation mode.				
	Cooling o	peration					
	Ts + 1 Monitorin	ng (Fan)					
	Ts – 1		 If the status of compressor-OFF continues for 15 minutes the room 				
	Heating o	peration	temperature after selecting an operation mode (COOL/HEAT), reselect an				
	I		operation mode.				
	4. DRY operation		1) Detects the room temperature (Ta) when				
	DRY operation is performed according between room temperature and		the DRY operation started.2) Starts operation under conditions in the				
	shown below.		left figure according to the temperature difference between the room tempera-				
	In DRY operation, fan speed is c prevent lowering of the room ten	perature and to avoid air	ture and the setup temperature (Tsc).				
	flow from blowing directly to pers	sons.	Setup temperature (Tsc) = Set temperature on remote controller				
	[°C]		(Ts) + (0.0 to 1.0) 3) When the room temperature is lower				
	Та	L- (W5)	1°C or less than the setup temperature,				
	+1.0	(W5+W3) / 2	turn off the compressor.				
	+0.5						
		SUL (W3)					
	Tsc 1	Fan speed					
		i all speeu					


FILE NO. SVM-16003

Item	Operation flow and	l applicable data, etc.	Description		
2. Indoor fan motor control	<in cooling="" operation=""> (This operation controls the fa The indoor fan (cross flow far control induction motor. The fa MANUAL mode, and in 5 stag tively. (Table 1)</in>	n) is operated by the phase- an rotates in 5 stages in	* Symbols UH : Ultra High H : High M+ : Medium+ M : Medium L+ : Low+		
Fan speed setu	MANUAL	(Fig. 1) Fan speed	L : Low L- : Low– UL : Ultra Low SUL : Super Ultra Low		
AUTO		W7	* The fan speed broadly varies due to position of the louver, etc.		
		(L + M) / 2	The described value indicates one under condition of inclining		
	M	WA	downward blowing.		
	M+	(M + H) / 2	1) When setting the fan speed to L,		
		WD	L+, M, M+ or H on the remote controller, the operation is		
		performed with the constant speed shown in Fig. 1.			
Ta [°C] +2.5 +2.0 a +1.5 b +1.0 c +0.5 d Tsc e	*4 *4 : F	an speed = $(M + -L) \times 3/4 + L$ an speed = $(M + -L) \times 2/4 + L$ an speed = $(M + -L) \times 1/4 + L$ ar approximation M+ and L)	 When setting the fan speed to AUTO on the remote controller, revolution of the fan motor is controlled to the fan speed level shown in Fig. 2 and Table 1 according to the setup tempera- ture, room temperature, and heat exchanger temperature. 		

						7BKV-E	i ian an			DBKV-E	
Fan speed		Mode		Cod	olina		atina	Cooling			ating
level	<u> </u>		DDV	Fan speed	Air flow rate	Fan speed	Air flow rate	Fan speed	Air flow rate		Air flow rate
	Cool	Heat	DRY	(rpm)	(m ³ /hr)	(rpm)	(m ³ /hr)	(rpm)	(m ³ /hr)	(rpm)	(m ³ /hr)
WF		UH		1080	540	1080	540	1110	580	1110	580
WE	UH	н		1080	540	1080	540	1110	580	1110	580
WD	н	M+	UH	1050	520	1030	510	1080	530	1060	525
WC	M+		н	1000	490	940	450	1030	510	870	400
WB		М	M+	910	430	850	380	940	450	870	400
WA	М		М	820	370	850	380	850	390	750	325
W9		L+		820	370	730	310	850	390	750	325
W8	L+	L	L+	710	300	620	240	730	310	640	250
W7	L	L-		600	230	580	225	620	240	600	230
W6	L-		L	570	220	580	225	590	230	600	230
W5	UL	UL	L-	550	200	550	200	570	220	570	220
W4			UL	550	200	550	200	570	220	570	220
W3	SUL		SUL/SL-	540	190	520	180	550	200	520	180
W2		SUL		520	180	520	180	520	180	520	180
W1				500	170	500	170	500	170	500	170

		Mode		RAS-13BKV-E						
Fan speed		woue		Coc	oling	Heating				
level	Cool	Heat	DRY	Fan speed	Air flow rate	Fan speed	Air flow rate			
	0001	пеа	DKT	(rpm)	(m ³ /hr)	(rpm)	(m ³ /hr)			
WF		UH		1200	620	1200	620			
WE	UH	н		1200	620	1200	620			
WD	Н	M+	UH	1170	600	1080	530			
WC	M+		н	1120	560	1020	500			
WB		М	M+	1010	500	960	470			
WA	М		М	900	420	960	470			
W9		L+		900	420	840	380			
W8	L+	L	L+	770	340	720	305			
W7	L	L-		640	250	660	265			
W6	L-		L	620	240	660	265			
W5	UL	UL	L-	600	230	600	230			
W4			UL	600	230	600	230			
W3	SUL		SUL/SL-	560	180	520	180			
W2		SUL		520	180	520	180			
W1				500	170	500	170			

FILE NO. SVM-16003

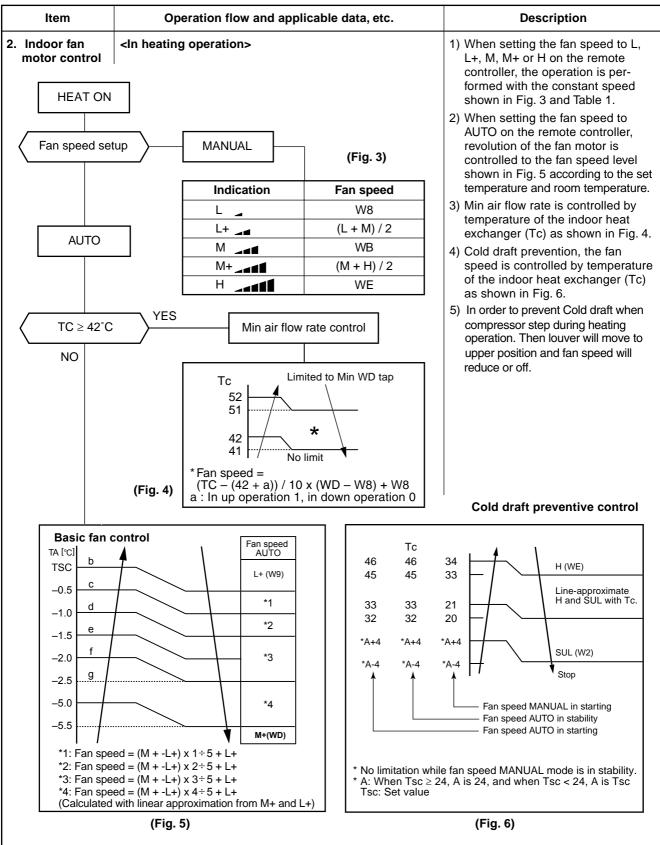



		In starting	In stability			
FAN AUTO	• W	ntil 12 minutes passed after operation start hen 12 to 25 minutes passed after operation art and room temp. is 3°C or lower than set temp.	 When 12 to 25 minutes passed after operation start and room temp. is higher than (set temp. –3°C) When 25 minutes or more passed after operation start 			
FAN Manual	• Ro	oom temp. < Set temp. –4°C	 Room temp. ≥ Set temp3.5°C 			

lte	em		Operation flow and applicable data, etc.									Descriptio	on	
3. Outdo motor	control	Receivir indoor u * For the	ng the init, th e fan r syste ns of c er ON	opera e con motor, m is u contro	ation o troller a DC used. I	comma of out motor	and fro door with	om the unit co non-s	e co ontr stag	e is contro ontroller of ols fan sp e variable to 8 stage	f eed. es for 2)	from the process controlle controlle When st outdoor conditio fan mote Whethe is detec	er of the out trong wind b side, the op ner continue or stopped. r the fan is l	ntroller is door unit ferred to the door unit. blows at beration of air es with the ocked or not operation of
	Indo	or unit co	ntrolle	ər								alarm is	displayed in	
												locked.	ng to each c	peration
	door unit ration com door fan c an speed the motor NC fan motor 3) Fan loo	≥ 400 stopp ON ck	l) ed.	YES	fan	moto	status r con	tinu			mode, b outdoor compres of the or	y the condit	ions of e (To) and on, the speed	
						- (-b.)								
	4) Moto	or operate	s as s	snowr				w.						
					~ 3	31.7								
		ln c	ooling	g oper	ation] [In He	eating op	eration	
Comr	pressor sr	beed (rps)	Hz<	:13.8		Hz≤32.4		-Hz	4 1	Compresso	or speed (r	os) Hz<16.8	8 16.8≤ Hz≤48.6	48.6 <hz~max< td=""></hz~max<>
			IVIIIN	MAX		MAX				r	To ≥ 10° (f 8	f 9
	$T_0 \ge 38^{\circ}$ $T_0 \ge 28^{\circ}$		f6	f B	f8	fE	f A	fE		То	To < 10°0		f B	fE
			f 5	f A	f 7	fE	f 9	fE		ŀ	To < 5°C	fE	f E	f E
То		$b \ge 15^{\circ}C$	f3	f 7	f5	f 9	f7	f B	┥┝	When To is	$To < -3^{\circ}C$		f E f F	f E f F
		$b \ge 5.5^{\circ}C$	f 2	f5	f 4	f7	f6	f 9	╡┖				IF	
		o≥0°C	f 1	f3	f3	f 5	f 4	f 7						

Outdoor fan speed (rpm)

f 3

f 1

f 5

fΕ

Тар	RAS-07BAV-E, RAS-10BAV-E	RAS-13BAV-E
f 0	0	0
f 1	300	300
f 2	370	370
f 3	390	390
f 4	460	460
f 5	500	500
f 6	520	520
f 7	620	620

To < 0°C

When To is abnormal

f 1

OFF

f 2


f B

f 2

OFF fE


f 4

Та	р	RAS-07BAV-E, RAS-10BAV-E	RAS-13BAV-E
f 8	3	720	720
fS	9	750	750
f A	4	780	780
fE	3	780	780
fC	2	880	880
f)	880	880
fE	Ξ	880	950
f F	=	880	950

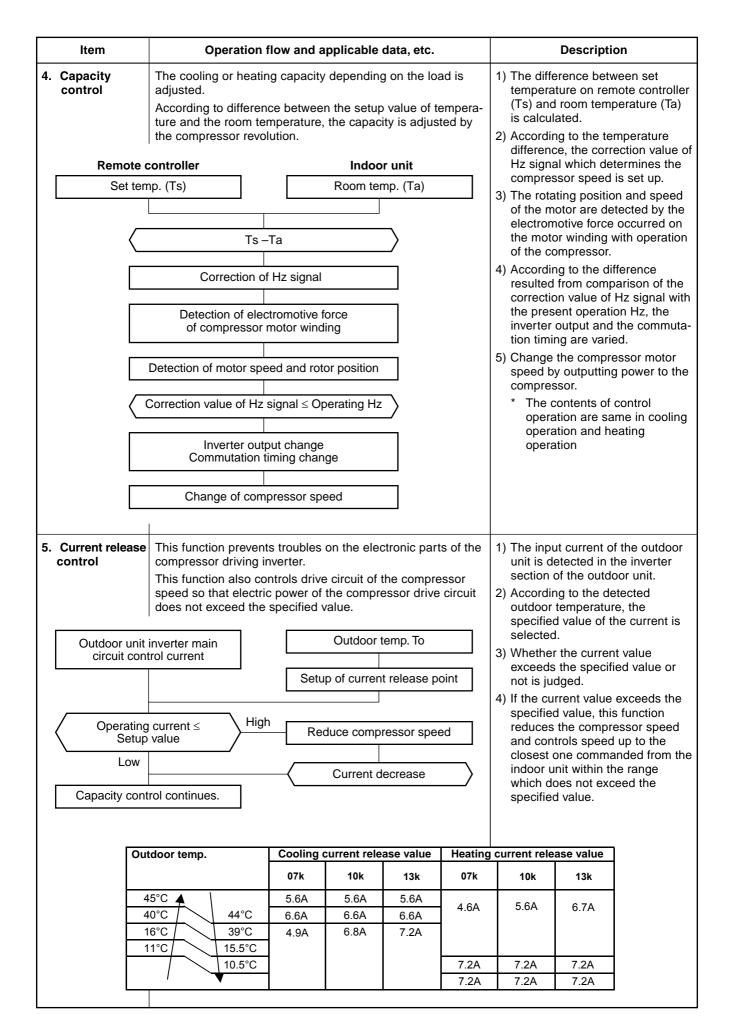

Item	Operation flow and applicable data, etc.	Description
6. Release protective control by tempera- ture of indoor heat exchanger	<in cooling="" dry="" operation=""> (Prevent-freezing control for indoor heat exchanger) In cooling/dry operation, the sensor of indoor heat exchanger detects evaporation temperature and controls the compressor speed so that temperature of the heat exchanger does not exceed the specified value. Usual cooling capacity control A Reduction of compressor speed Reduction of compressor speed</in>	 When temperature of the indoor heat exchanger drops below 5°C, the compressor speed is reduced. (P zone) When temperature of the indoor heat exchanger rises in the range from 6°C to under 7°C, the compressor speed is kept. (Q zone) When temperature of the indoor heat exchanger rises to 7°C or higher, the capacity control operation returns to the usual control in cooling operation. (R zone)
Indoor heat exchanger temperature 25°C	In heating operation> (Prevent-overpressure control for refrigerating cycle) In heating operation, the sensor of indoor heat ex- changer detects condensation temperature and controls the compressor speed so that temperature of the heat exchanger does not exceed the specified value. Reduction of compressor speed P Q When the value is in Q zone, the compressor speed is kept. Usual heating capacity control R	 When temperature of the indoor heat exchanger rises in the range from 52°C to 55°C, the compressor speed is kept. (Q zone) When temperature of the indoor heat exchanger drops in the range from 48°C to under 55°C, the compressor speed is kept. (Q zone) When temperature of the indoor heat exchanger rises to 55°C or higher, the compressor speed is reduced. (P zone) When temperature of the indoor heat exchanger does not rise to 52°C, or when it drops below to 48°C, the capacity control operation returns to the usual control in heating operation. (R zone)

FILE NO. SVM-16003

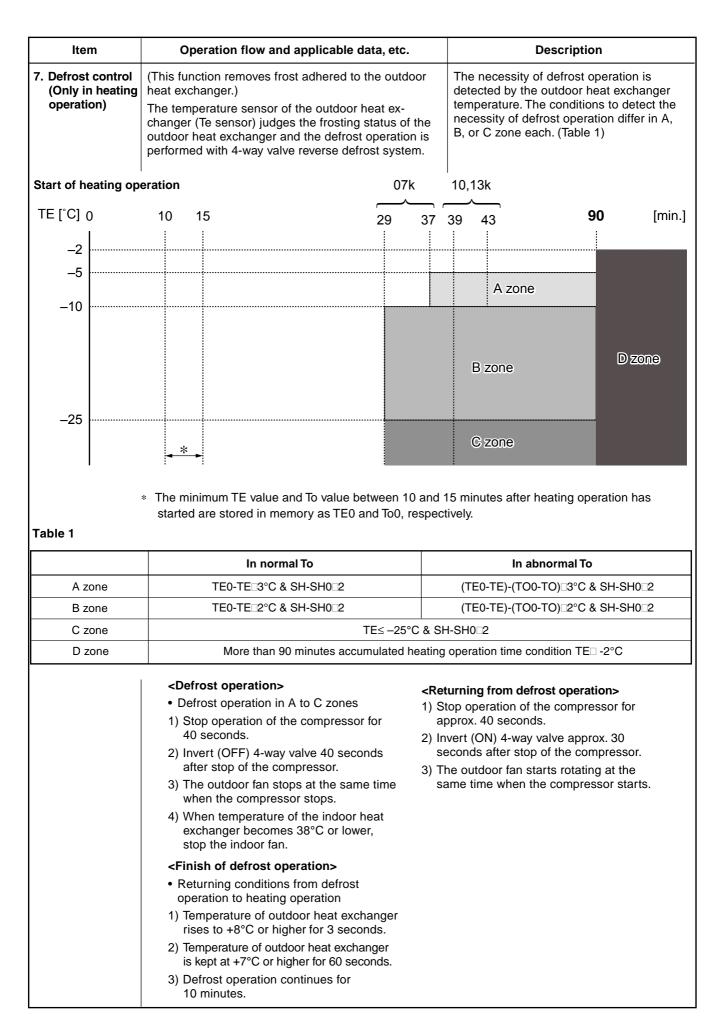

ltem	Operation flow and applicable data, etc.	Description
8. Louver control1) Louver position	 This function controls the air direction of the indoor unit. The position is automatically controlled according to the operation mode (COOL/HEAT). The set louver position is stored in memory by the microcomputer, and the louver returns to the stored position when the next operation is performed. (Cooling/Heating memory position) The angle of the louver is indicated as the louver closes fully is 0°. 1) Louver position in cooling operation 	
	Initial setting of "Cooling storage position" Louver : Directs downward (40.9°) 2) Louver position in heating operation	
	Heating operation/ AUTO (HEAT)	
	Initial setting of "Heating storage position" Louver : Directs downward (80.5°)	
2) Air direction ac	ljustment Air direction	 The louver position can be arbitrarily set up by pressing [FIX] button.
Horizontal blowing	Inclined blowing Blowing downward Inclined blowing Horizontal blowing Image: Strate St	
3) Swing	 Swing operation is perfor in range 35° with the Fixed position as the center. If the swing range exceeded either upper or lower limit position, swing operation is perfomed in range 35° from the limit. 	 Swing When pressing [SWING] button during operation, the louver starts swinging.
	Upper Limit Position. Swing range 35° Fixed Position before start swing. Upper Limit Position Fixed Position before start swing tower Limit Position before start swing compared a so position before start swing compared a so position position before start swing compared a so position position compared a so position	

ltem	(Operation	flow and	Description		
9. ECO operation	When press Economic o			the remote cor	troller, a	<cooling operation=""></cooling>
operation	Cooling of This function between the following fighted by the follow	peration> n operates e set and th	the air co	 The control target temperature increase 0.5°C per hour up to 2°C starting from the set temperature when ECONO has been received. The indoor fan speed is depend 		
TA +6.5 +6.0 +5.5 +5.0 +4.5 +4.5 +3.0 +2.5 +3.0 +1.5 +1.0 +1.5 +1.0 +0.5 TSC -0.5 -1.0 -2.0	1H	* 11 * 10 * 9	Zone 12 11 11 10 9 8 7 6 7 7 6 7 7 6 7 7 6 7 7 6 7 7 6 7 7 6 7 7 6 7 7 6 7 7 6 7 7 6 7 7 6 7 7 7 6 7 7 7 6 7 7 7 7 7 7 7 7 7 7 7 7 7		The second se	 2) The induct fail speed is depend on presetting and can change every speed after setting ECO operation. 3) The compressor speed is controlled as shown in the left figure.
			7BKV-E 10BKV-E		13BKV-E	
	Coc	ol min	13	13	13	
	DRY	' max	28	31	31	
	<heating o<="" td=""><td>peration></td><td></td><td><heating operation=""></heating></td></heating>	peration>		<heating operation=""></heating>		
0		30 m	inutes	\rightarrow Tim	e Compressor speed 0Hz	1) Setting the compressor speed to Max. aHz, the temperature zone in which the operation can be
-0.5 -1.0 -1.5 -1.5 -2.5 -3.0 -2.5 -3.0 -4.0 -5.0 -4.0 -5.0 -4.0 -5.0 -4.0 -5.0 -8.0 -7.0 -8.0 -7.0 -8.0 -7.0 -8.0 -7.0 -7.0 -7.0 -7.0 -7.0 -7.0 -7.5 -7.0 -7.5 -7.5 -7.5 -7.5 -7.5 -7.5 -7.5 -7.5	B			A	A zone aHz	 performed with Max. cHz is gradually widened after 30 minutes passed when starting ECO operation. 2) The indoor fan speed is depend on presetting and can change every speed after setting ECO
La -6.0 Harrison -7.0 O -8.0 La -7.0 O -9.0 -10.0 -11.0	с			в	B zone a to cHz	operation.
				c	C zone cHz]
		Hz ()7BKV-E	10BKV-E	13BKV-E	
		а	13	13	13	
		c	28	43	55	

ltem	Operation flow and applicable data, etc.	Description
10. Temporary operation	Pressing [RESET] button starts the temporary opera- tion of [AUTO] operation. When keeping [RESET] button pressed for 10 seconds or more, the temporary [COOL] operation is performed.	 When pressing [RESET] button, the temporary [AUTO] operation starts. When keeping [RESET] button pressed for 3 seconds or more, Pi, Pi, Pi sound is heard and [AUTO RESTART] control is changed.
Did you pre for 3 sec Did you pre for 10 se	RESET button. ss [RESET] button conds or more? YES ss [RESET] button YES ss [RESET] button conds or more? YES Temporary [AUTO] operation YES So [RESET] button CORESTART] control. Temporary [COOL] Operation	 3) When keeping [RESET] button pressed for 10 seconds or more, "Pi" sound is heard and the temporary [COOL] operation starts. 4) To stop the temporary operation, press the button again.
11. Discharge to	emperature control Control operation	1. Purpose This function detects error on the
	Judges as an error and stops the compressor.	refrigerating cycle or error on the com- pressor, and performs protective control.
117°C 115°C	Reduce the compressor speed.	2. Operation
103°C	Reduce slowly compressor speed. Keeps the compressor speed.	Control of the compressor speed The appendix particular particular
100°C		The speed control is performed as described in the left table based upon
93°C	If the operation is performed with lower speed than one commanded by the serial signal, speed is slowly raised up to the commanded speed.	the discharge temperature.
	Operates with speed commanded by the serial signal.	

ltem	Operation flow and applicable data, etc.	Description
Stop by remote control Power OFF * SH (Super Hea Ts (Temperatu	at amount) = re of suction pipe of the compressor) – exchanger temperature at evaporation side)	 When starting the operation, move the valve once until it fits to the stopper. (Initialize) In this time, "Click" sound may be heard. Adjust the open degree of valve by super heat amount. (SH control) If the discharge temperature was excessively up, adjust the open degree of valve so that it is in the range of set temperature. (Discharge temp. control) When defrost operation is performed, the open degree of valve is adjusted according to each setup conditions during preparation for defrost and during defrost operation (4-way valve is inversed). To turn off the compressor while the air conditioner stops by control of the thermostat or by remote controller, adjust the open degree of valve to the setup value before stop of the compressor.

	ltem	Operation flow and app	Description				
	Self-Cleaning function			1. Purpose The Self-Cleaning operation is to minimize t growth of mold, bacteria etc. by running the fan and drying so as to keep the			
	Unit n	now performing cooling or dry op	peration	inside of the air condition	ner clean.		
			Self-Cleaning operation When the cooling or dry operation shuts				
		Press "STOP" button		down, the unit automatically starts the Self- Cleaning operation which is then performed for the specified period based on duration of the operation which was performed prior to the shutdown, after which the			
		V					
	Only timer inc	licator lights, and Self Cleaning	operation starts	prior to the shutdown, after which the Self-Cleaning operation stops. (The Self-Cleaning operation is not performed after a heating operation.)			
	[▼		2. Operation	g operation.)		
		Time set now elapses		 When the stop signal controller or timer-off full 			
		¥		only the timer indicate 2) The period of the Self-C	or light.		
		Operation stops		is determined by the operation performed p	duration of the prior to the		
				reception of the stop of 3) After the Self-Cleaning been performed for the	operation has		
	slightly. The indoor fan operates continuously at a speed of 500 rpm. Self-Cleaning operation times						
			Operation time	Self-Cleaning operation time			
			Up to 10 minutes	No Self-Cleaning operation performed (0 minutes)			
		Cooling: Auto (cooling) Dry	10 minutes or longer	30 mins.			
		Heating: Auto (heating)		1			
		Auto (fan only)	No Self-Cleaning opera	eration performed			
		Shutdown					
To stop an ongoing Self-Cleanir Press the start/stop button on th operation. (After pressing the b second time without delay (withi		on the remote controlle ne button for the first tir	r twice during the Self-Cleani	ing			

Item	Operation flow and applie		Description	
13. Self-Cleanin function	g • Self-Cleaning diagram			
Operation display	ON	OFF		OFF
FCU fan	ON rpm is depend on presetting.	ON (500RPM))	OFF
FCU louver	OPEN	OPEN (12.7°)		CLOSE
Timer display	ON or OFF depend on presetting of timer function.	ON		ON or OFF depend on presetting of timer function.
Compressor	ON or OFF depend on presetting per room temperature.	OFF		OFF
CDU fan	ON or OFF depend on presetting per room temperature.	OFF		OFF
	Cool mode or dry mode operation more than 10 mins. Turn off by remo timer-off		ns.	Operation time tically turn-off.
14. Remote-A or selection	 To separate using of remote control unit in case of 2 air conditioner are in Remote Control B Setup. 1) Press RESET button on the indot the air conditioner ON. 2) Point the remote control at the indication of the control by the tip of the pencil. "00 shown on the display. 4) Press MODE • during pushing C show on the display and "00" will the air conditioner will turn OFF. Control B is memorized. Note : 1. Repeat above step to reset to be A. 2. Remote Control A has not "A 3. Default setting of Remote C factory is A. 	for each indoor installed nearly. or unit to turn door unit. ne Remote 0" will be shown CHK •. "B" will disappear and The Remote Remote Control A" display.	indo 2. Desc Whe situation beer near remon rece thus 3. Ope The contained rece ler a (At the selection	operation is to operate only one or unit using one remote controller. cription n operating one indoor unit in a tion where two indoor units have n installed in the same room or by rooms, this operation prevents the ote controller signal from being ived simultaneously by both units, preventing both units from operating.

ltem	Operation flow and applicable data, etc.	Description
15. Hi-POWER Mode	([Hi-POWER] button on the remote controller is pressed)	
	When [Hi-POWER] button is pressed while the indoor unit is in Auto, Cooling or Heating operation, Hi- POWER mark is indicated on the display of the remote	
	controller and the unit operates as follows.	
	 Automatic operation The indoor unit operates in according to the current operation. 	
	 2. Cooling operation The preset temperature drops 1°C (The value of the preset temperature on the remote controller does not change.) 	
	The indoor unit's fan speed level increase 1 tap	
	 3. Heating operation The preset temperature increases 2°C (The value of the preset temperature on the 	
	remote controller does not change.) The indoor unit's fan speed level increase 1 tap	
	4. The Hi-POWER mode can not be set in Dry operation	

9-3. Auto Restart Function

This indoor unit is equipped with an automatic restarting function which allows the unit to restart operating with the set operating conditions in the event of a power supply being accidentally shut down. The operation will resume without warning three minutes after power is restored.

This function is not set to work when shipped from the factory. Therefore it is necessary to set it to work.

9-3-1. How to Set the Auto Restart Function

To set the auto restart function, proceed as follows:

The power supply to the unit must be on ; the function will not set if the power is off.

Press the [RESET] button located in the center of the front panel continuously for three seconds.

The unit receives the signal and beeps three times.

The unit then restarts operating automatically in the event of power supply being accidentally shut down.

• When the unit is standby (Not operating)

Operation	Motions		
Press [RESET] button for more than three seconds. (Less than 10 seconds)	The unit is on standby. \downarrow		
	The unit starts to operate. ↓ After approx. three The unit beeps three times and continues to operate.	The green indicator is on. ee seconds, The green indicator flashes for 5 seconds.	
OPERATION / RESET Button	If the unit is not required to ope button once more or use the rea	rate at this time, press [RESET] mote controller to turn it off.	

• When the unit is in operation

Operation	Motions		
Press [RESET] button for more than three seconds. (Less than 10 seconds)	The unit is in operation. \downarrow	The green indicator is on.	
	The unit stops operating. \downarrow After approx. three	The green indicator is turned off. ee seconds,	
	The unit beeps three times.	The green indicator flashes for 5 seconds.	
OPERATION / RESET Button	If the unit is required to operate once more or use the remote co	e at this time, press [RESET] button ontroller to turn it on.	

• While the filter check indicator is on, the RESET button has the function of filter reset betton.

9-3-2. How to Cancel the Auto Restart Function

To cancel auto restart function, proceed as follows :

Repeat the setting procedure : the unit receives the signal and beeps three times.

The unit will be required to be turned on with the remote controller after the main power supply is turned off.

• When the system is on stand-by (not operating)

Operation	Motions
Press [RESET] button for more than three seconds. (Less than 10 seconds)	The unit is on standby. \downarrow
OPERATION RESERVICE OPERATION/ RESET Button	 The unit starts to operate. The green indicator is on. ↓ After approx. three seconds, The unit beeps three times and continues to operate. If the unit is not required to operate at this time, press [RESET] button once more or use the remote controller to turn it off.

• When the system is operating

Operation	Motions		
Press [RESET] button for more than three seconds. (Less than 10 seconds)	The unit is in operation. \downarrow	The green indicator is on.	
	The unit stops operating. ↓ After approx. th The unit beeps three times. If the unit is required to opera once more or use the remote	te at this time, press [RESET] button	

9-3-3. Power Failure During Timer Operation

When the unit is turned off because of power failure during timer operation, the timer operation is cancelled. In that case, set the timer operation again.

NOTE :

The Daily Timer is reset while a command signal can be received from the remote controller even if it stopped due to a power failure.

5. ECO OPERATION

To automatically control room to save energy (except in DRY and FAN ONLY mode)

Press ECO : Start and stop the operation.

Note: Cooling operation; the set temperature will increase automatically 1 degree/ hour for 2 hours (maximum 2 degrees increase). For heating operation the set temperature will decrease.

6. TEMPORARY OPERATION

In case of the misplaced or discharged remote control

- Pressing the RESET button, the unit can start or stop without using the remote control.
- Operation mode is set on AUTOMATIC operation, preset temperature is 25°C and fan operation is automatic speed.

7. AUTO RESTART OPERATION

To automatically restart the conditioner after the power failure (Power of the unit must be on.)

Setting

- Press and hold the RESET button on the indoor unit for 3 seconds to set the operation. (3 beep sound and OPERATION lamp blink 5 time/sec for 5 secpmds)
 Do not operate ON timer and OFF timer.
- 2. Press and hold the RESET button on the indoor unit for 3 seconds to cancel the operation. (3 beep sound but OPERATION lamp does not blink)

9-4. Remote Controller and Its Fuctions

9-4-1. Parts Name of Remoe Controller

- 1 Infrared signal emitter
- 2 Start/Stop button
- ③ Mode select button (MODE)
- ④ Temperature button (TEMP)
- 5 Fan speed button (FAN)
- 6 Swing louver button (SWING)
- ⑦ Set louver button (FIX)
- 8 Off timer button (OFF)
- 9 High power button (Hi-POWER)
- 1 Economy button (ECO)
- ① Clear button (CLEAR)
- 12 Check button (CHECK)

9-4-2. Operation of remote control

1. AUTOMATIC OPERATION

To automatically select cooling, or fan only operation.

- 1. Press I : Select A.
- 2. Press : Set the desired temperature.
- 3. Press AUTO, LOW _, LOW+ _, MED _, MED+ _, or HIGH ____.

2. COOLING / HEATING / FAN ONLY OPERATION

To automatically select cooling, or fan only operation.

- 1. Press \fbox : Select Cool \clubsuit , Heat \diamondsuit , or Fan only \circledast .
- Press : Set the desired temperature.
 Cooling / Heating : Min 17°C Max 30°C, Fan Only: No temperature indication
- 3. Press FAN : Select AUTO, LOW -, LOW+ --, MED ---, MED+ ----, or HIGH -----.

3. DRY OPERATION (COOLING ONLY)


For dehumidification, a moderate cooling performance is controlled automatically.

- 1. Press Model : Select Dry \circlearrowleft .
- 2. Press : Set the desired temperature.

4. Hi-POWER OPERATION

To automatically control room temperature and airflow for faster cooling or heating operation (except in DRY and FAN ONLY mode)


Press **HROWER** : Start and stop the operation.

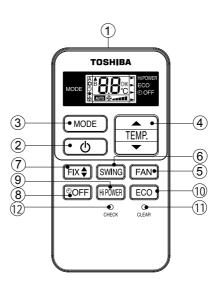

5. DISPLAY LAMP BRIGHTNESS ADJUSTMENT

To decrease the display lamp brightness or turn it off.

- 1. Press and hold FAN for 3 seconds until brightness level ($d\mathbf{D}, d\mathbf{I}, d\mathbf{I}, d\mathbf{C}$ or $d\mathbf{B}$) is shown on remote controller display.
- 2. Press to rise or decrease the brightness in 4 levels.

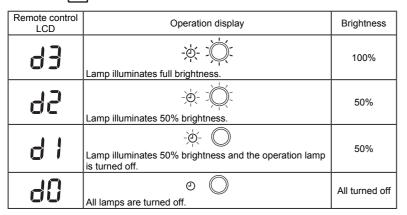

• In the examples of d I and d , the lamp illuminates for 5 seconds before going off.

9-4-3. Name and Functions of Indications on Remote Controller

[Display]

All indications, except for the clock time indicator, are displayed by pressing the ${f U}$ button.

1. Transmission mark


This transmission mark \blacktriangle indicates when the remote controller transmits signals to the indoor unit.

2. Mode indicator

Indicates the current operation mode. (A : Auto, \mathfrak{A} : Cool, \mathfrak{O} : Dry, \mathfrak{G} : Fan only)

3. Temperature indicator

Indicates the temperature setting. (17°C to 30°C)

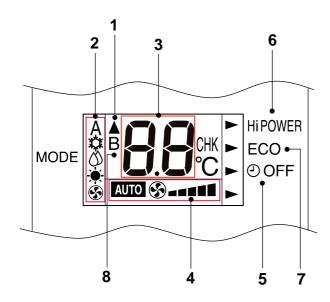

4. FAN speed indicator

Indicates the selected fan speed.

AUTO or five fan speed levels

(LOW _ , LOW+__, MED _ _ , MED+_ ,

HIGH $_______$) can be shown.

Indicates AUTO when the operating mode is either AUTO or \bigcirc : Dry.

5. OFF TIMER indicator

Indicates when the OFF timer is setting press the OFF timer button and select off time by TEMP botton after that back to press OFF timer again to timer setting and push CLEAR button to stop the operation.

6. Hi-POWER indicator

Indicates when the Hi-POWER operation starts. Press the Hi-POWER button to start and press it again to stop the operation.

7. ECO indicator

Indicates when the ECO is in activated. Press the ECO button to start and press it again to stop operation.

8. A, B change indicator remote controller


When the remote controller switching function is set, "B" appears in the remote controller display. (When the remote controller setting is "A", there is no indication at this position.)


9. Swing

Press swing button to start the swing operation and press it again to stop the swing operation.

10. INSTALLATION PROCEDURE

10-1. Installation Diagram of Indoor and Outdoor Units

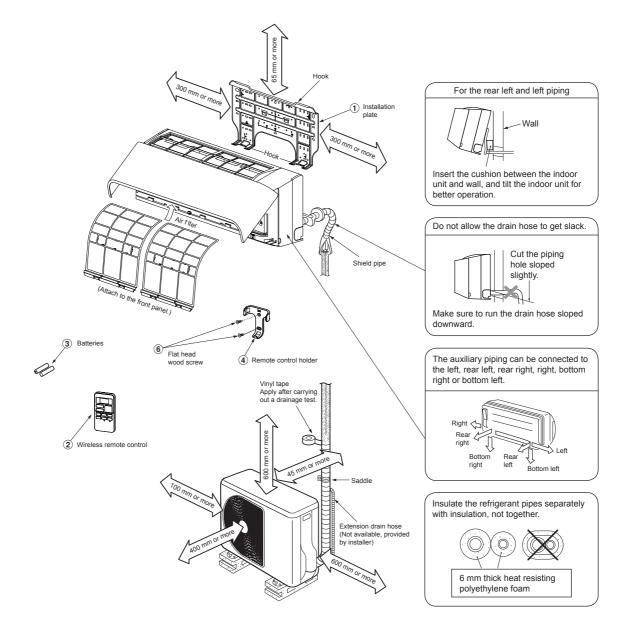

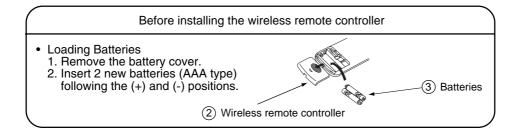

10-2. Installation

10-2-1. Optional installation parts

Part Code	Parts name	Q'ty
A	Refrigerant piping Liquid side : Ø 6.35 mm Gas side : Ø 9.52 mm	One each
В	Pipe insulating material (polyethylene foam, 6 mm thick)	1
С	Putty, PVC tapes	One each

<Fixing bolt arrangement of outdoor unit>

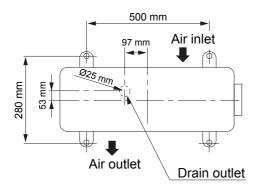


Fig. 10-2-1

- Secure the outdoor unit with fixing bolts and nuts if the unit is likely to be exposed to a strong wind.
- Use \emptyset 8 mm or \emptyset 10 mm anchor bolts and nuts.
- If it is necessary to drain the defrost water, attach drain nipple ⑦ to the bottom plate of the outdoor unit before installing it.

10-2-2. Accessory and installation parts

Installation manual

Part No.	Part name (Q'ty)	Part No.	Part name (Q'ty)	Part No.	Part name (Q'ty)
1		4	as as	7	
	Installation plate x 1		Remote control holder x 1		Drain nipple* x 1
2					
	Wireless remote control x 1		Mounting screw Ø4 x 25 ℓ x 6		
3 Difference of the second sec		6	Flat head wood screw Ø3.1 x 16 ℓ x 2		
Others Name Owner's manual				The par outdoor	t marked with asterisk (*) is packaged with the unit.

10-2-3. Installation/Servicing Tools

Changes in the product and components

In the case of an air conditioner using R410A, in order to prevent any other refrigerant from being charged accidentally, the service port diameter of the outdoor unit control valve (3 way valve) has been changed. (1/2 UNF 20 threads per inch)

• In order to increase the pressure resisting strength of the refrigerant piping flare processing diameter and size of opposite side of flare nuts has been changed. (for copper pipes with nominal dimensions 1/2 and 5/8)

New tools for R410A

New tools for R410A	Applica	ble to R22 model	Changes
Gauge manifold	×	ele.	As pressure is high, it is impossible to measure by means of conventional gauge. In order to prevent any other refrigerant from being charged, each port diameter has been changed.
Charge hose	×	660	In order to increase pressure resisting strength, hose materials and port size have been changed (to 1/2 UNF 20 threads per inch). When purchasing a charge hose, be sure to confirm the port size.
Electronic balance for refrigerant charging	0		As pressure is high and gasification speed is fast, it is difficult to read the indicated value by means of charging cylinder, as air bubbles occur.
Torque wrench (nominal diam. 1/2, 5/8)	×	2	The size of opposite sides of flare nuts have been increased. Incidentally, a common wrench is used for nominal diameters 1/4 and 3/8.
Flare tool (clutch type)	0	T	By increasing the clamp bar's receiving hole, strength of spring in the tool has been improved.
Gauge for projection adjustment	_	_	Used when flare is made by using conventional flare tool.
Vacuum pump adapter	0		Connected to conventional vacuum pump. It is necessary to use an adapter to prevent vacuum pump oil from flowing back to the charge hose. The charge hose connecting part has two ports-one for conventional refrigerant (7/16 UNF 20 threads per inch) and one for R410A. If the vacuum pump oil (mineral) mixes with R410A a sludge may occur and damage the equipment.
Gas leakage detector	×	-	Exclusive for HFC refrigerant.

• Incidentally, the "refrigerant cylinder" comes with the refrigerant designation (R410A) and protector coating in the U. S's ARI specified rose color (ARI color code: PMS 507).

• Also, the "charge port and packing for refrigerant cylinder" require 1/2 UNF 20 threads per inch corresponding to the charge hose's port size.

10-3. Indoor Unit

10-3-1. Installation place

- A place which provides the spaces around the indoor unit as shown in the diagram
- A place where there are no obstacles near the air inlet and outlet
- A place which allows easy installation of the piping to the outdoor unit
- · A place which allows the front panel to be opened
- The indoor unit shall be installed at least 2.0 m height. Also, it must avoided to put anything on the top of the indoor unit.

CAUTION

- Direct sunlight to the indoor unit's wireless receiver should be avoided.
- The microprocessor in the indoor unit should not be too close to RF noise sources. (For details, see the owner's manual.)

<Remote control>

- A place where there are no obstacles such as a curtain that may block the signal from the indoor unit.
- Do not install the remote control in a place exposed to direct sunlight or close to a heating source, such as a stove.
- Keep the remote control at least 1 m apart from the nearest TV set or stereo equipment. (This is necessary to prevent image disturbances or noise interference.)
- The location of the remote control should be determined as shown below.

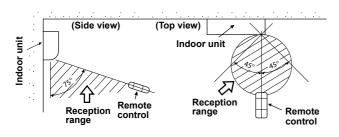


Fig. 10-3-1

10-3-2. Cutting a hole and mounting installation

<Cutting a hole>

When installing the refrigerant pipes from the rear.

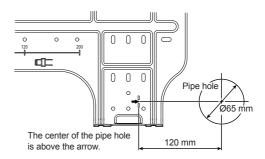


Fig. 10-3-2

 After determining the pipe hole position on the mounting plate (→), drill the pipe hole (Ø65 mm) at a slight downward slant to the outdoor side.

NOTE

 When drilling a wall that contains a metal lath, wire lath or metal plate, be sure to use a pipe hole brim ring sold separately.

<Mounting the installation plate>

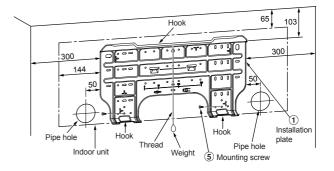



Fig. 10-3-3

<When the installation plate is directly mounted on the wall>

- 1. Securely fit the installation plate onto the wall by screwing it in the upper and lower parts to hook up the indoor unit.
- 2. To mount the installation plate on a concrete wall with anchor bolts, utilize the anchor bolt holes as illustrated in the above figure.
- 3. Install the installation plate horizontally in the wall.

CAUTION

When installing the installation plate with a mounting screw, do not use the anchor bolt hole. Otherwise the unit may fall down and result in personal injury and property damage.

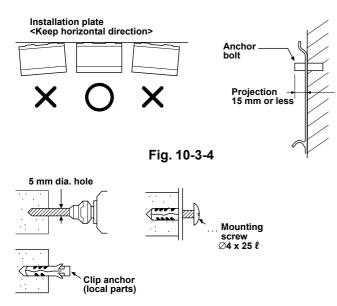



CAUTION

Failure to firmly install the unit may result in personal injury and property damage if the unit falls.

- In case of block, brick, concrete or similar type walls, make 5 mm dia. holes in the wall.
- Insert clip anchors for appropriate mounting screws

NOTE:

• Secure four corners and lower parts of the installation plate with 4 to 6 mounting screws to install it.

10-3-3. Piping and drain hose installation

<Piping and Drain Hose Forming>

 Since dewing results in a machine trouble, make sure to insulate both the connecting pipes. (Use polyethylene foam as insulating material.)

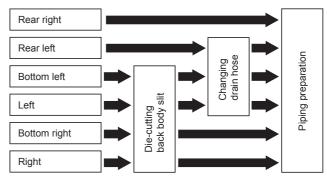


Fig. 10-3-6

1. Die-cutting back body slit

Cut out the slit on the leftward or right side of the back body for the left or right connection and the slit on the bottom left or right side of the back body for the bottom left or right connection with a pair of nippers.

2. Changing drain hose

For leftward connection, bottom-leftward connection and rearleftward connection's piping, it is necessary to change the drain hose and drain cap.

<How to remove the Drain Cap>

Clip the drain cap by needle-nose pliers and pull out.




Fig. 10-3-7

<How to remove the drain hose>

- The drain hose can be removed by removing the screw securing the drain hose and then pulling out the drain hose.
- When removing the drain hose, be careful of any sharp edges of steel plate. The edges can injuries.
- To install the drain hose, insert the drain hose firmly until the connection part contacts with heat insulator, and the secure it with original screw.

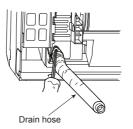


Fig. 10-3-8

<How to fix the Drain Cap>

1) Insert hexagon wrench (4 mm) in a center head.





Fig. 10-3-9

2) Firmly insert drain cap.





CAUTION

Firmly insert the drain hose and drain cap; otherwise, water may leak.

<In case of right or left piping>

 After scribing slits of the back body with a knife or a making-off pin, cut them with a pair of nippers or an equivalent tool.


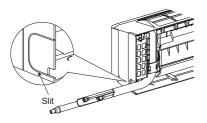


Fig. 10-3-11

<In case of bottom right or bottom left piping>

 After scribing slits of the back body with a knife or a making-off pin, cut them with a pair of nippers or an equivalent tool.

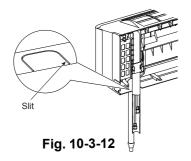

<Left-hand connection with piping>

Bend the connecting pipe so that it is laid within 43 mm above the wall surface. If the connecting pipe is laid exceeding 43 mm above the wall surface, the indoor unit may unstably be set on the wall. When bending the connecting pipe, make sure to use a spring bender so as not to crush the pipe.

Bend the connection pipe within a radius of 30 mm.

To connect the pipe after installation of the unit (figure)


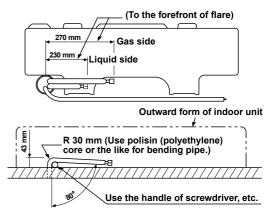


Fig. 10-3-13

NOTE

If the pipe is bent incorrectly, the indoor unit may unstably be set on the wall.


After passing the connecting pipe through the pipe hole, connect the connecting pipe to the auxiliary pipes and wrap the facing tape around them.

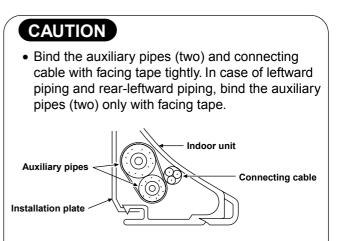

- Carefully arrange pipes so that any pipe does not stick out of the rear plate of the indoor unit.
- Carefully connect the auxiliary pipes and connecting pipes to each other and cut off the insulating tape wound on the connecting pipe to avoid double-taping at the joint, moreover, seal the joint with the vinyl tape, etc.
- Since dewing results in a machine trouble, make sure to insulate both the connecting pipes. (Use polyethylene foam as insulating material.)
- When bending a pipe, carefully do it, not to crush it.

10-3-4. Indoor unit fixing

- 1. Pass the pipe through the hole in the wall, and hook the indoor unit on the installation plate at the upper hooks.
- 2. Swing the indoor unit to right and left to confirm that it is firmly hooked up on the installation plate.
- 3. While pressing the indoor unit onto the wall, hook it at the lower part on the installation plate. Pull the indoor unit toward you to confirm that it is firmly hooked up on the installation plate.



(unhook)

Fig. 10-3-14

• For detaching the indoor unit from the installation plate, pull the indoor unit toward you while pushing its bottom up at the specified parts.

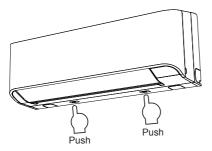


Fig. 10-3-15

10-3-5. Drainage

1. Run the drain hose sloped downwards.

NOTE

• Hole should be made at a slight downward slant on the outdoor side.

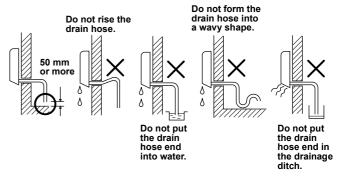


Fig. 10-3-16

- 2. Put water in the drain pan and make sure that the water is drained out of doors.
- 3. When connecting extension drain hose, insulate the connecting part of extension drain hose with shield pipe.




Fig. 10-3-17

CAUTION

Arrange the drain pipe for proper drainage from the unit.

Improper drainage can result in dew-dropping.

This air conditioner has the structure designed to drain water collected from dew, which forms on the back of the indoor unit, to the drain pan.

Therefore, do not store the power cord and other parts at a height above the drain guide.




Fig. 10-3-18

10-4. Outdoor Unit

10-4-1. Installation place

- A place which provides the spaces around the outdoor unit as shown in the left diagram.
- A place which can bear the weight of the outdoor unit and does not allow an increase in noise level and vibration.
- A place where the operation noise and discharged air do not disturb users neighbors.
- A place which is not exposed to a strong wind.
- A place free of a leakage of combustible gases.
- A place which does not block a passage.
- When the outdoor unit is to be installed in an elevated position, be sure to secure its feet.
- An allowable length and height of the connecting pipe, please refer from 1. SPECIFICATIONS.
- A place where the drain water does not raise any problem.

10-4-2. Precautions about Installation in Regions with Snowfall and Cold Temperatures

- Do not use the supplied drain nipple for draining water. Drain the water from all the drain holes directly.
- To protect the outdoor unit from snow accumulation, install a holding frame, and attach a snow protection hood and plate.
- Do not use a double-stacked design.

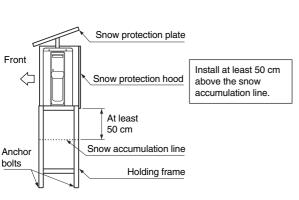


Fig. 10-4-1

CAUTION

- 1. Install the outdoor unit without anything blocking the air discharging.
- 2. When the outdoor unit is installed in a place exposed always exposed to strong wind like a coast or on a high storey of a building, secure the normal fan operation using a duct or a wind shield.
- 3. In particularly windy areas, install the unit such as to avoid admission of wind.

- 4. Installation in the following places may result in trouble.
 - Do not install the unit in such places.
 - A place full of machine oil.
 - A saline-place such as the coast.
 - A place full of sulfide gas.
 - A place where high-frequency waves are likely to be generated as from audio equipment, welders, and medical equipment.




Fig. 10-4-2

10-4-3. Refrigerant piping connection

<Flaring>

1. Cut the pipe with a pipe cutter.




Fig. 10-4-3

2. Insert a flare nut into the pipe, and flare the pipe.
Projection margin in flaring : A (Unit : mm)




Fig. 10-4-4

Rigid (Clutch type)


Outer dia. of copper pipe	R410A tool used	Conventional tool used	
6.35	0 to 0.5	1.0 to 1.5	
9.52	0 to 0.5	1.0 to 1.5	

Imperial (wing nut type)

Outer dia. of copper pipe	R410A		
6.35	1.5 to 2.0		
9.52	1.5 to 2.0		

<Tightening connection>

Align the centers of the connecting pipes and tighten the flare nut as far as possible with your fingers. Then tighten the nut with a spanner and torque wrench as shown in the figure.



Use a wrench to secure.

Use a torque wrench to tighten.

(I Init · Nam)



CAUTION


- Do not apply excess torque.
- Otherwise, the nut may crack depending on the conditions.

Outer dia. of copper pipe	Tightening torque
Ø6.35 mm	16 to 18 (1.6 to 1.8 kgf·m)
Ø9.52 mm	30 to 42 (3.0 to 4.2 kgf·m)

Tightening torque of flare pipe connections

The operating pressure of R410A is higher than that of R22. (Approx. 1.6 times).

It is therefore necessary to firmly tighten the flare pipe connecting sections (which connect the indoor and outdoor units) up to the specified tightening torque. Incorrect connections may cause not only a gas leakage, but also damage to the refrigerant cycle.

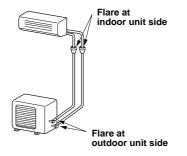




AIR PURGE

Evacuate the air in the connecting pipes and in the indoor unit using a vacuum pump. Do not use the refrigerant in the outdoor unit. For details, see the manual of the vacuum pump.

<Using a vacuum pump>

Be sure to use a vacuum pump with counter-flow prevention function so that inside oil of the pump does not flow backward into pipes of the air conditioner when the pump stops. (If oil inside of the vacuum pump enters into the air conditioner, which use R410A, refrigeration cycle trouble may result.)

- 1. Connect the charge hose from the manifold valve to the service port of the gas side packed valve.
- 2. Connect the charge hose to the port of the vacuum pump.
- 3. Open fully the low pressure side handle of the gauge manifold valve.
- 4. Operate the vacuum pump to start evacuating. Perform evacuating for about 15 minutes if the piping length is 20 meters. (15 minutes for 20 meters) (assuming a pump capacity of 27 liters per minute. Then confirm that the compound pressure gauge reading is -101 kPa (76 cmHg).
- 5. Close the low pressure side valve handle of gauge manifold.
- 6. Open fully the valve stem of the packed valves (both side of Gas and Liquid).
- 7. Remove the charging hose from the service port.
- 8. Securely tighten the caps on the packed valves.

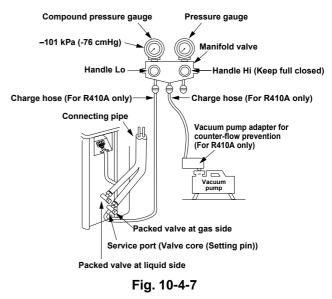

CAUTION

- KEEP IMPORTANT 5 POINTS FOR PIPING WORK
- (1) Take away dust and moisture (Inside of the connecting pipes.)
- (2) Tight connection (between pipes and unit)
- (3) Evacuate the air in the connecting pipes using VACUUM PUMP.
- (4) Check gas leak (connected points)
- (5) Be save to fully open the packed valves before operation.

<Packed valve handling precautions>

• Open the valve stem all the way out, but do not try to open it beyond the stopper.

Pipe size of Packed Valve	Size of Hexagon wrench		
12.70 mm and smallers	A = 4 mm		
15.88 mm	A = 5 mm		

• Securely tighten the valve cap with torque in the following table

Сар	Cap Size (H)	Torque
Valve Rod	H17 - H19	14∼18 N.m (1.4 to 1.8 kgf·m)
Сар	H22 - H30	33~42 N.m (3.3 to 4.2 kgf⋅m)
Service	H14	8~12 N.m (0.8 to 1.2 kgf⋅m)
Port Cap	H17	14~18 N.m (1.4 to 1.8 kgf⋅m)

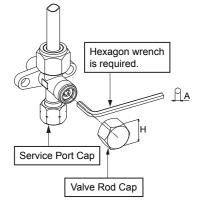


Fig. 10-4-8

10-5. Electrical works

The power supply can be selected to connect to indoor unit or outdoor unit. Choose proper way and connect the power supply and connecting cable by follow the instruction as following.


Model	RAS-07BKV-E RAS-10BKV-E		RAS-13BKV-E		
Power source	50H	Hz, 220 – 240 V Single phase			
Maximum running current	5.0A	6.7A	7.1A		
Plug socket & fuse rating	6.5A	8.5A	9.0A		
Power supply cable	107 DN E or 60245 1 E C66 (4.5 mm ² or more)				
Connecting cable	H07RN-F or 60245 IEC66 (1.5 mm ² or more)				

10-5-1. Wiring Connection

Indoor unit

Wiring of the connecting cable can be carried out without removing the front panel.

- 1. Remove the air inlet grille.
- Open the air inlet grille upward and pull it toward you.
- 2. Remove the terminal cover and cord clamp.
- 3. Insert the connecting cable (according to the local cords) into the pipe hole on the wall.
- 4. Take out the connecting cable through the cable slot on the rear panel so that it protrudes about 20 cm from the front.
- 5. Insert the connecting cable fully into the terminal block and secure it tightly with screws.
- 6. Tightening torque : 1.2 N·m (0.12 kgf·m)
- 7. Secure the connecting cable with the cord clamp.
- 8. Fix the terminal cover and air inlet grille on the indoor unit.

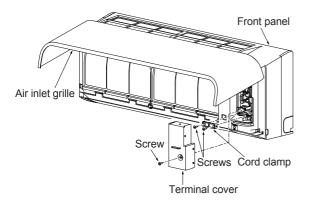

How to install the air inlet grille on the indoor unit

• When attaching the air inlet grille, the contrary of the removed operation is performed.

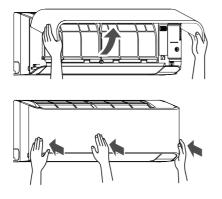


Fig. 10-5-1

Outdoor unit

- 1. Remove the valve cover, the electric parts cover and the cord clamp from the outdoor unit.
- 2. Connect the connecting cable to the terminal as identif ed by the matching numbers on the terminal block of indoor and outdoor unit.
- Insert the power cord and the connecting cable carefully into the terminal block and secure it tightly with screws.
- 4. Use vinyl tape, etc. to insulate the cords which are not going to be used. Locate them so that they do not touch any electrical or metal parts.
- 5. Secure the power cord and the connecting cable with the cord clamp.
- 6. Attach the electric parts cover and the valve cover on the outdoor unit.



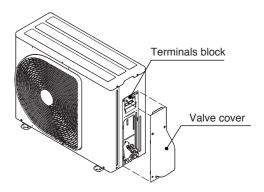


Fig. 10-5-2

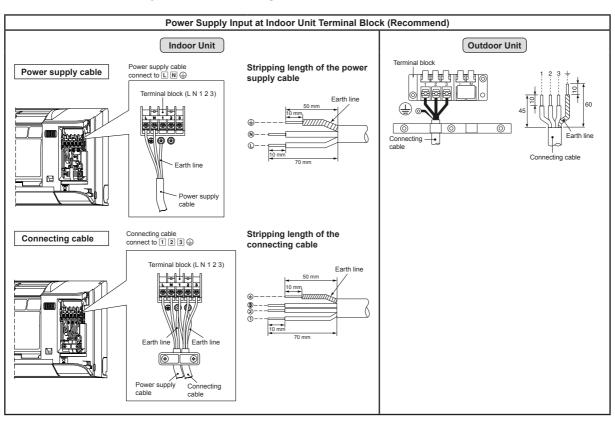


10-5-2. Power Supply and Connecting Cable Connection

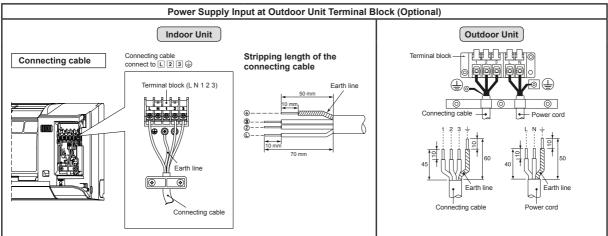

CAUTION

- 1. The power supply must be same as the rated of air conditioner.
- 2. Prepare the power source for exclusive use with air conditioner.
- Circuit breaker must be used for the power supply line of this air conditioner.
 Be sure to comply power supply and connecting cable for size and wiring method.
- 5. Every wire must be connected firmly.
- 6. Perform wiring works so as to allow a general wiring capacity.
- Wrong wiring connection may cause some electrical part burn out. 7
- 8. Incorrect or incomplete wiring is carried out, it will cause an ignition or smoke.
- 9. This product can be connected to main power supply.

Connection to fixed wiring : A switch which disconnects all poles and has a contact separation at least 3mm must be incorporated in the fixed wiring.

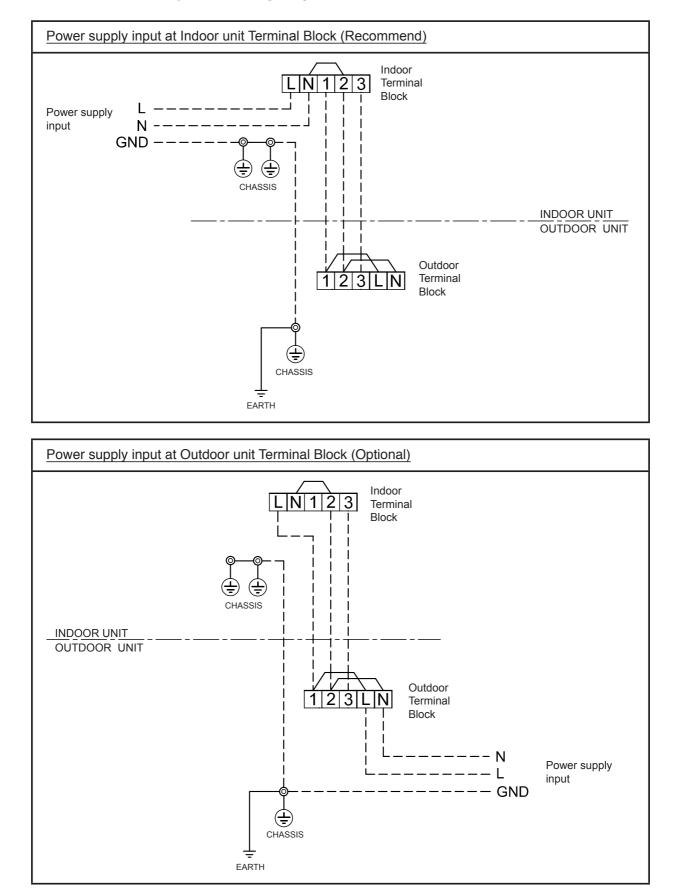

10-5-3. Power supply input wiring diagram

10-6. Others 10-6-1. Gas leak test

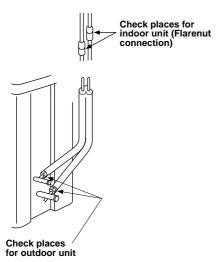


Fig. 10-6-1

• Check the flare nut connections for the gas leak with a gas leak detector or soap water.

10-6-2. Remote Control A-B Selection

- When two indoor units are installed in the same room or adjacent two rooms, if operating a unit, two units may receive the remote control signal simultaneously and operate. In this case, the operation can be preserved by setting either one remote control to B setting. (Both are set to A setting in factory shipment.)
- The remote control signal is not received when the settings of indoor unit and remote control are different.
- There is no relation between A setting/B setting and A room/B room when connecting the piping and cables.

<Remote control A-B selection>

To separate using of remote control for each indoor unit in case of 2 air conditioners are installed nearly.

<Remote Control B Setup>

- 1. Press [RESET] button on the indoor unit to turn the air conditioner ON.
- 2. Point the remote control at the indoor unit.
- 3. Push and hold [CHECK] button on the Remote Control by the tip of the pencil. "00" will be shown on the display (Picture 1).
- 4. Press [MODE] during pushing [CHECK]. "B" will show on the display and "00" will disappear and the air conditioner will turn OFF. The Remote Control B is memorized (Picture 2).

- **NOTE :** 1. Repeat above step to reset Remote Control to be A.
 - 2. Remote Control A has not "A" display.
 - 3. Default setting of Remote Control from factory is A.



Fig. 10-6-2

10-6-3. Test operation

To switch the TEST RUN (COOL) mode, press [RESET] button for 10 sec. (The beeper will make a short beep.)

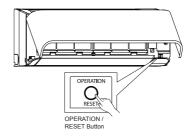


Fig. 10-6-3

10-6-4. Auto restart setting

This product is designed so that, after a power failure, it can restart automatically in the same operating mode as before the power failure.

Information

The product was shipped with Auto Restart function in the off position. Turn it on as required.

<How to set the auto restart>

- Press and hold the [RESET] button on the indoor unit 3 seconds to set the operation. (3 beep sound and OPERATION lamp blink 5 time/sec for 5 seconds)
- Press and hold the [RESET] button on the indoor unit for 3 seconds to cancel the operation. (3 beep sound but OPERATION lamp does not blink)
 - In case of ON timer or OFF timer are set, AUTO RESTART OPERATION dose not activate.

11. HOW TO DIAGNOSE THE TROUBLE

The pulse motor circuits are mounted to both indoor and outdoor units. Therefore, diagnose troubles according to the trouble diagnosis procedure as described below. (Refer to the check points in servicing written on the wiring diagrams attached to the indoor/outdoor units.)

Table 11-1

No.	Troubleshooting Procedure				
1	First Confirmation				
2	Primary Judgment				
3	Judgment by Flashing LED of Indoor Unit				
4	Self-Diagnosis by Remote Controller				
5	Judgment of Trouble by Every Symptom				

No.	Troubleshooting Procedure				
6	How to Check Simply the Main Parts				
7	Troubleshooting				
8	How to Diagnose Trouble in Outdoor Unit				
9	How to Check Simply the Main Parts				
10	How to Simply Judge Whether Outdoor Fan Motor is Good or Bad				

• Precautions when handling the new inverter

▲ CAUTION: HIGH VOLTAGEN

The high voltage circuit is incorporated.

Be careful to do the check service, as the electric shock may be caused in case of touching parts on the P.C. board by hand.

The new inverter will be incorporated starting with this unit.

• The control circuitry has an uninsulated construction.

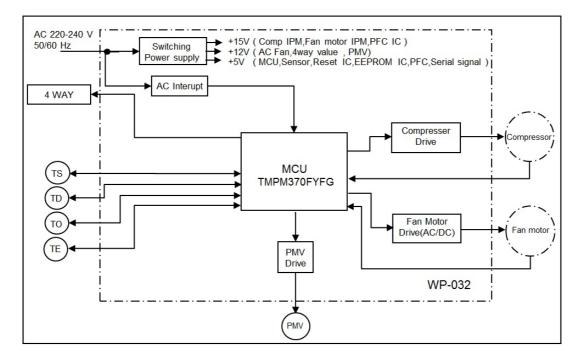


Fig. 11-1

A high voltage (equivalent to the supply voltage) is also energized to ground through the sensors, PMV and other low-voltage circuits. The sensor leads and other wires are covered with insulated tubes for protection. Nevertheless, care must be taken to ensure that these wires are not pinched.

CAUTION

Take sufficient care to avoid directly touching any of the circuit parts without first turning off the power.

At times such as when the circuit board is to be replaced, place the circuit board assembly in a vertical position.

Laying the board flat on an electrically conductive object (such as the top panel of the air conditioner's outdoor unit) while a charge is still retained by the electrolytic capacitors of the inverter's main circuit may cause short-circuiting between the electrolytic capacitors and secondary circuit components and result in damage to the components.



Fig. 11-2

Do NOT lay the circuit board assembly flat.

• Precautions when inspecting the control section of the outdoor unit

NOTE :

A large-capacity electrolytic capacitor is used in the outdoor unit controller (inverter). Therefore, if the power supply is turned off, charge (charging voltage DC280 to 380V) remains and discharging takes a lot of time. After turning off the power source, if touching the charging section before discharging, an electrical shock may be caused. Discharge the electrolytic capacitor completely by using soldering iron, etc.

< Discharging method >

- 1. Remove the inverter cover (plating) by opening four mounting claws.
- 2. Take off PCB from space under PCB.
- Upside down PCB as shown below, connect the discharge resistance (approx. 100Ω40W) or plug of the soldering iron to voltage between + – terminals of the C07 ("WARNING ELECTRIC SHOCK" is indicated.) electrolytic capacitor (760µF/450V) on P.C. board, and then perform discharging.

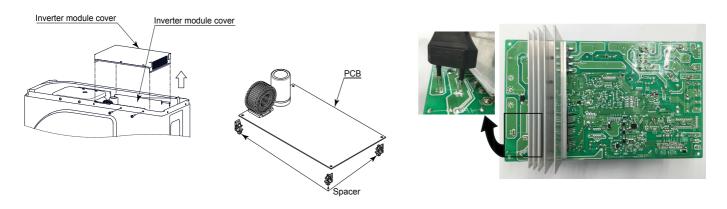


Fig. 11-3

11-1. First Confirmation

11-1-1. Confirmation of Power Supply

Confirm that the power breaker operates (ON) normally.

11-1-2. Confirmation of Power Voltage

Confirm that power voltage is AC $220-230-240 \pm 10\%$. If power voltage is not in this range, the unit may not operate normally.

11-1-3. Operation Which is not a Trouble (Program Operation)

For controlling the air conditioner, the program operations are built in the microcomputer as described in the following table.

If a claim is made for running operation, check whether or not it meets to the contents in the following table. When it does, we inform you that it is not trouble of equipment, but it is indispensable for controlling and maintaining of air conditioner.

No.	Operation of air conditioner	Description
1	When power breaker is turned "ON", the operation indicator (White) of the indoor unit flashes.	The OPERATION lamp of the indoor unit flashes when power source is turned on. If [0] button is operated once, flashing stops. (Flashes also in power failure)
2	Compressor may not operate even if the room temperature is within range of compressor-ON.	The compressor does not operate while compressor restart delay timer (3-minutes timer) operates. The same phenomenon is found after power source has been turned on because 3-minutes timer operates.
3	In Dry and ECO mode, FAN (air flow) display does not change even though FAN (air flow select) button is operated.	The air flow indication is fixed to [AUTO].
4	Increasing of compressor motor speed stops approx. 30 seconds after operation started, and then compressor motor speed increases again approx. 30 seconds after.	For smooth operation of the compressor, the compressor motor speed is restricted to Max. 41 rps for 2 minutes, and Max.91 rps for 2 minutes to 3 minutes, respectively after the operation has started.
5	In AUTO mode, the operation mode is changed.	After selecting Cool or Heat mode, select an operation mode again if the compressor keeps stop status for 15 minutes.
6	In HEAT mode, the compressor motor speed does not increase up to the maxi- mum speed or decreases before the temperature arrives at the set temperature.	The compressor motor speed may decrease by high- temp. release control (Release protective operation by tempup of the indoor heat exchanger) or current release control.

Table 11-1-1

11-2. Primary Judgment

To diagnose the troubles, use the following methods.

- 1) Judgment by flashing LED of indoor unit
- 2) Self-diagnosis by service check remote controller
- 3) Judgment of trouble by every symptom

Firstly use the method 1) for diagnosis. Then, use the method 2) or 3) to diagnose the details of troubles.

11-3. Judgment by Flashing LED of Indoor Unit

While the indoor unit monitors the operation status of the air conditioner, if the protective circuit operates, the contents of self-diagnosis are displayed with block on the indoor unit indication section.

	ltem	Check code	Block display	Description for self-diagnosis	
Indoor indication lamp flashes.	A	—	OPERATION Flashing display (1 Hz)	Power failure (when power is ON)	
♥ Which lamp does flash?	В		OPERATION Flashing display (5 Hz)	Protective circuit operation for indoor P.C. board	
	С	[]	OPERATION TIMER (White) Flashing display (5 Hz)	Protective circuit operation for connecting cable and serial signal system	
	D	02	OPERATION Flashing display (5 Hz)	Protective circuit operation for outdoor P.C. board	
	E	Ξ	OPERATION TIMER Flashing display (5 Hz)	Protective circuit operation for others (including compressor)	
	F		OPERATION TIMER Normal Normal Flash 1 Hz None Flash 2 Hz None 2 times every 1 sec.	Release status display Nothing Current release TD release	
			None Flash 1Hz	TC release	

Table 11-3-1

NOTES :

- 1. The contents of items B and C and a part of item E are displayed when air conditioner operates.
- 2. When item B and C, and item B and a part of item E occur concurrently, priority is given to the block of item B.
- 3. The check codes can be confirmed on the remote controller for servicing.

11-4. Self-Diagnosis by Remote Controller (Check Code)

- 1. If the lamps are indicated as shown B to E in Table 11-3-1, execute the self-diagnosis by the remote controller.
- When the remote controller is set to the service mode, the indoor controller diagnoses the operation condition and indicates the information of the self-diagnosis on the display of the remote controller with the check codes. If a fault is detected, all lamps on the indoor unit will flash at 5Hz and it will beep for 10 seconds (Beep, Beep, Beep, ...). The timer lamp usually flashes (5Hz) during self-diagnosis.

11-4-1. How to Use Remote Controller in Service Mode

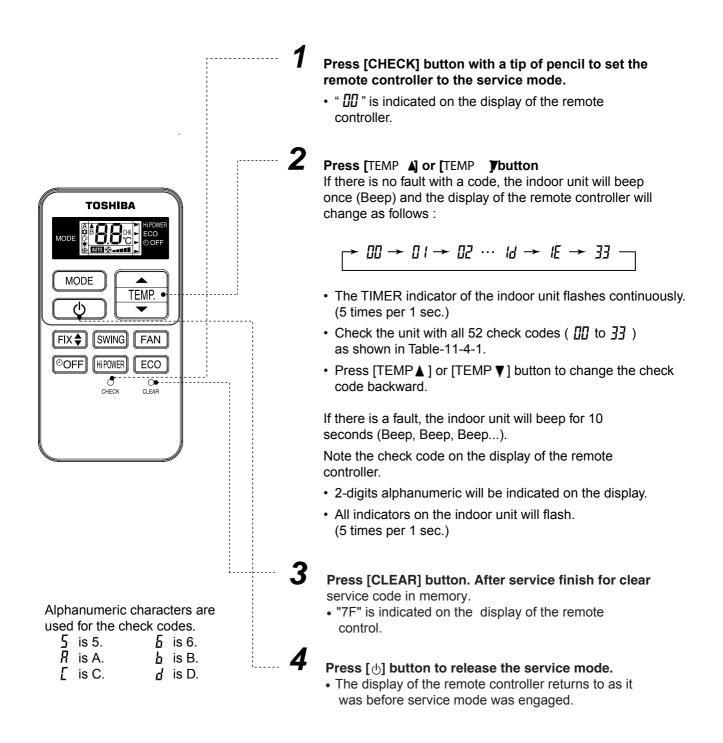


Fig. 11-4-1

11-4-2 Caution at Servicing

- 1. After using the service mode of remote controller finished, press the [] button to reset the remote controller to normal function.
- 2. After finished the diagnosis by the remote controller, turn OFF power supply and turn its ON again to reset the air conditioner to normal operation. However, the check codes are not deleted from memory of the microcomputer.
- 3. After servicing finished, press [CLR] button of remote controller under service mode status to send code "7F" to the indoor unit. The check code stored in memory is cleared.

Bloc	k distinction		Operation of diagnos	is function		
Check code	Block		Cause of operation		Display flashing error	Action and Judgment
	Indoor P.C. board.		TA sensor ; The room temperature sensor is short-Circuit or disconnection.	Operation continues.	Flashes when error is detected.	 Check the sensor TA and connection. In case of the sensor and its connection is normal, check the P.C. board.
			TC sensor ; The heat exchanger temperature sensor of the indoor unit is out of place, disconnection, short-circuit or migration.	Operation continues.	Flashes when error is detected.	 Check the sensor TC and connection. In case of the sensor and its connection is normal, check the P.C. board.
			Fan motor of the indoor unit is failure, lock-rotor, short- circuit, disconnection, etc. Or its circuit on P.C. board has problem.	All OFF	Flashes when error is detected.	 Check the fan motor and connection. In case of the motor and its connection is normal, check the P.C. board.
		Other trouble on the indoor P.C. board.	Depend on cause of failure.	Depend on cause of failure.	Replace P.C. board.	

Table 11-4-1

Blo	ock distinction		Operation of diagnosi			
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	Action and Judgment
	Serial signal and connecting cable.	<u>[</u>]'-{	 Defective wiring of the connecting cable or miss-wiring. Operation signal has not send from the indoor unit when operation start. Outdoor unit has not send return signal to the indoor unit when operation started. Return signal from the outdoor unit is stop during operation. Some protector (hardware, if exist) of the outdoor unit open circuit of signal. Signal circuit of indoor P.C. board or outdoor 	Indoor unit operates continue. Outdoor unit stop.	Flashes when error is detected. Flashing stop and outdoor unit start to operate when the return signal from the outdoor unit is normal.	 to 3) The outdoor unit never operate. Check connecting cable and correct if defective wiring. Check 25A fuse of inverter P.C. board. Check 3.15A fuse of inverter P.C. board. Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board. The outdoor unit abnormal stop at some time. If the other check codes are found concurrently, check them together.
	re below. Sendi	tart	P.C. board is failure in some period. oor unit shall be measured in the of the indoor unit when have n ignal from the outdoor unit. 3 minutes stop Voltage variation stop or have not voltage output.	ot return	iod as	 Check protector (hardware) such as Hi-Pressure switch, Thermal-Relay, etc. Check refrigerant amount or any possibility case which may caused high temperature or high pressure. Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board.

8

7

Time (Min)

0

3

*** 1 minute after resending, the indoor unit display flashes error.

4

** Signal resend again after 3 minutes stop. And the signal will send continuously.

* Signal send only 1 minute and stop. Because of return signal from outdoor unit has not received.

Block distinction		Operation of diagnosis function				
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	Action and Judgment
	Outdoor P.C. board	! -{	Current on inverter circuit is over limit in short time. • Inverter P.C. board is failure, IGBT shortage, etc. • Compressor current is higher than limitation, lock rotor, etc.	All OFF	Flashes after error is detected 8 times*.	 Remove connecting lead wire of the compressor, and operate again. If outdoor fan does not operate or operate but stop after some period, replace the inverter P.C. board. If outdoor fan operates normally, measure 3-Phase output of inverter P.C. board (150-270VAC) at the connecting lead wire of compressor. If 3-Phase output is abnormal, replace inverter P.C.Board. If 3-Phase output is normal, replace compressor. (lock rotor, etc.)
		15	Compressor position-detect circuit error or short-circuit between winding of compressor.	All OFF	Flashes after error is detected 8 times*.	 Remove connecting lead wire of the compressor, and operate again. If outdoor fan does not operate or operation but stop after some period, replace the inverter P.C. board. If outdoor fan operates normally, measure resistance of compressor winding. If circuit is shortage, replace the compressor.
		;]	Current-detect circuit of inverter P.C. board error.	All OFF	Flashes after error is detected 4 times*.	Even if trying to operate again, all operations stop, replace inverter P.C. board.
		18	TE sensor ; The heat exchanger temperature sensor of the outdoor unit either TS sensor ; Suction pipe temperature sensor, out of place, disconnection or shortage.	All OFF	Flashes after error is detected 4 times*.	 Check sensors TE, TS and connection. In case of the sensors and its connection is normal, check the inverter P.C. board.
			TD sensor ; Discharge pipe temperature sensor is disconnection or shortage.	All OFF	Flashes after error is detected 4 times*.	 Check sensors TD and connection. In case of the sensor and its connection is normal, check the inverter P.C. board.
			Outdoor fan failure or its drive-circuit on the inverter P.C. board failure.	All OFF	Flashes after error is detected 8 times*.	 Check the motor, measure winding resistance, shortage or lock rotor. Check the inverter P.C. board.
			TO sensor ; The outdoor temperature sensor is disconnection or shortage.	Operation continues.	Record error after detected 4 times*. But does not flash display.	 Check sensors TO and connection. In case of the sensor and its connection is normal, check the inverter P.C. board.

Block distinction			Operation of diagnosi			
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	Action and Judgment
	After re-s	tarting operation	Compressor drive output error. (Relation of voltage, current and frequency is abnormal) • Overloading operation of compressor caused by over-charge refrigerant, P.M.V. failure, etc. • Compressor failure (High current).	or is detected, e	rror count is add (c	ount become 2 times)
ĒIJ			Return signal of the outdoor unit has been sent when operation start. But after that, signal is stop some time. Instantaneous power failure. Some protector (hardware) of the outdoor unit open circuit of signal. Signal circuit of indoor P.C. board or outdoor P.C. board is failure in some period.		• •	 Check power supply (Rate ± 10%) If the air conditioner repeat operates and stop with interval of approx. 10 to 40 minutes. Check protector (hardware) such as Hi-Pressure switch, Thermal-Relay, etc. Check refrigerant amount, packed valve opening and any possibility cause which may affect high temperature or high pressure. Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board.

Block distinction			Operation of diagno			
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	Action and Judgment
			Compressor does not rotate. Because of missed wiring, missed phase or shortage.	All OFF	Flashes after error is detected 8 times*.	 Remove connecting lead wire of the compressor, and operate again. If outdoor fan does not operate or operation but stop after some period, replace the inverter P.C. board. If outdoor fan operates normally, measure 3-Phase output of inverter P.C. board (150-270VAC) at the connecting lead wire of compressor. If 3-Phase output is abnormal, replace inverter P.C.Board. If 3-Phase output is normal, measure resistance of compressor winding. If winding is shortage, replace the compressor.
		1,5	Discharge temperature exceeded 117°C.	All OFF	Flashes after error is detected 4 times*.	 Check sensors TD. Check refrigerant amount. Check P.M.V. by measure the resistance of the coil and confirm its operation (sound of initial operation, etc.) Observe any possibility cause which may affect high temperature of compressor.
		<i> }</i> =	Compressor is high current though operation Hz is decreased to minimum limit. Installation problem. Instantaneous power failure. Refrigeration cycle problem. Compressor break down. Compressor failure (High current).operation, etc.)	All OFF	Flashes after error is detected 8 times*.	 Check installation conditions such as packed valve opening, refrigerant amount and power supply (rate ±10%, both of operation and non operation condition). Check P.M.V. by measure the resistance of the coil and confirm its operation (sound of initial operation, etc.) Observe any possibility cause which may affect high current of compressor. If 1, 2 and 3 are normal, replace compressor.

Block distinction			Operation of diagnos			
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	Action and Judgment
		21	 Return signal of the outdoor unit has been sent when operation start. But after that, signal is stop some time. Instantaneous power failure. Some protector (hardware) of the outdoor unit open circuit of signal. Signal circuit of indoor P.C. board or outdoor P.C. board or outdoor P.C. board is failure in some period. TE, TC high tmperature TE for cooling operation TC for heating operation. 	Indoor unit operates continue. Outdoor unit stop.	Flashes when error is detected 11 times*. Flashing stop and outdoor unit start to operate when the return signal from the outdoor unit is normal.	 Check power supply (Rate ±10%) If the air conditioner repeat operat and stop with interval of approx. 10 to 40 minutes. Check protector (hardware) such as Hi-Pressure switch, Thermal-Relay, etc. Check refrigerant amount, packed valve opening and any possibility cause which may affect high temperature or high pressure. Check operation signal of the indo unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board. Check and clean heat exchanger area Indoor and Outdoor unit.
	After Whe	r re-starting o n error count	st error is detected, error is count peration within 6 minutes, if same comes 4, 8 or 11 times, record er r conditioner can operate more the	error is detecte ror to check coc	d, error count is add le. But after re-star	d (count become 2 times) ting operation, if no error


11-5. Judgment of Trouble by Every Symptom

11-5-1. Indoor Unit (Including Remote Controller)

(1) Power is not turned on (Does not operate entirely)


<Primary check>

- 1. Is the supply voltage normal?
- 2. Is the normal voltage provided to the outdoor unit?
- 3. Is the crossover cable connected properly?
- 4. Is the fuse (F01) blown?

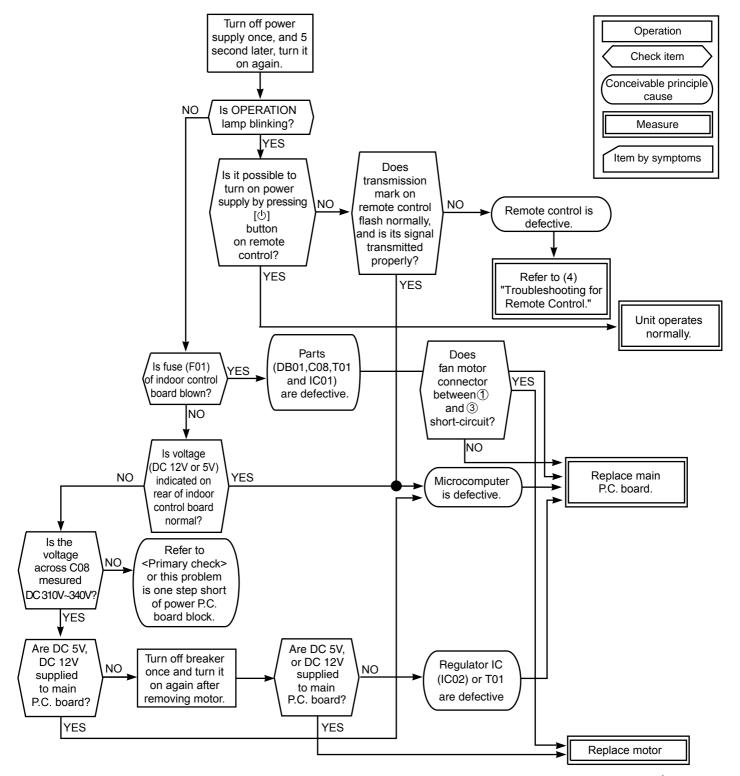

• Be sure to disconnect the motor connector CN10 after shut off the power supply, or it will be a cause of damage of the motor.

(2) Power is not turned on though Indoor P.C. board is replaced <Confirmation procedure>

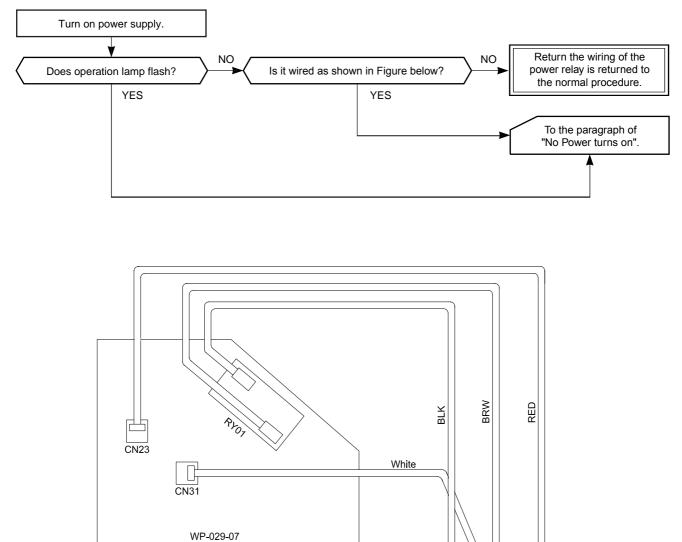


LN123

Power Supply (From Main Line) To outdoor unit

(3) Only the indoor motor fan does not operate

<Primary check>

- 1. Is it possible to detect the power supply voltage (AC220–240V) between ① and ② on the terminal block?
- Does the indoor fan motor operate in cooling operation? (In heating operation, the indoor fan motor does not operate for approximately 10 minutes after it is turned on, to prevent a cold air from blowing in.)

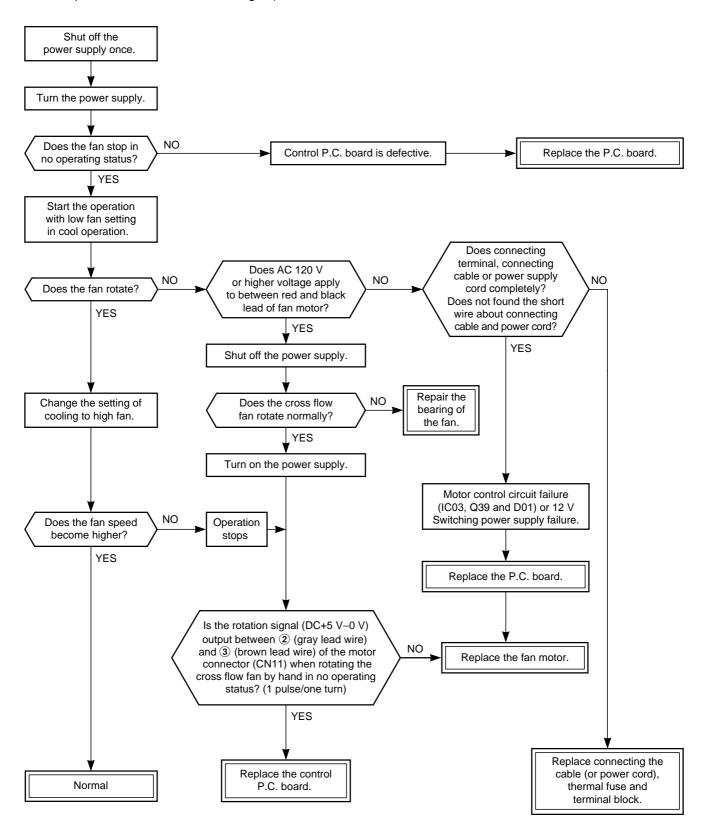

(For AC fan motor)

<Inspection procedure>


- 1. Remove the front panel. (Remove 2 screws.)
- 2. Remove the cover of the fan motor lead wires.
- 3. Check AC voltage with CN10 connector while the fan motor is rotating.

NOTE :

- Using a tester, measure the resistance value of each winding coil.
- Use a thin test rod.

SJM-240-25

- Do not disconnect the connector while the fan motor is rotating.
- For P.C. board side, proceed to the item "Only indoor fan does not operate" of "Judgment of Trouble by Every Symptom".

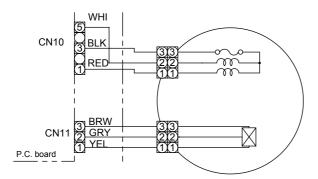


Position (P.C. board)	Resistance value
Between ③ (Black) - ① (Red)	120.6 \pm 8.4 Ω
Between 3 (Black) - 5 (White)	244.2 ± 17 Ω
Between ① (Red) - ⑤ (White)	$364.8~\pm~25.5~\Omega$

(4) Troubleshooting for remote controller

<Primary check>

Check that A or B selected on the main unit is matched with A or B selected on the remote controller.

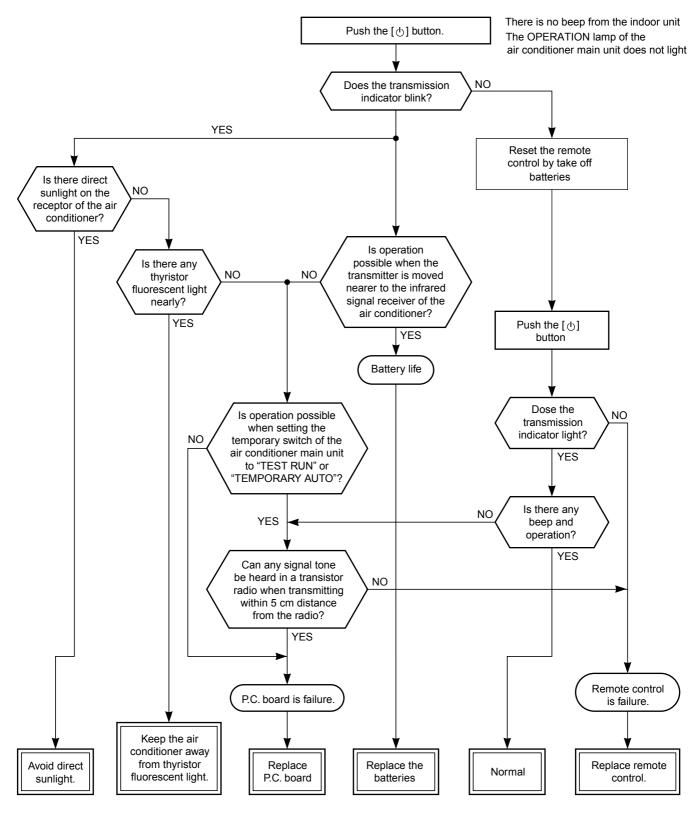


11-5-2. Wiring Failure (Interconnecting and Serial Signal Wire)

(1) Outdoor unit does not operate

 Is the voltage between ② and ③ of the indoor terminal block varied? Confirm that transmission from indoor unit to outdoor unit is correctly performed based upon the following diagram.

NOTE:

- Measurement should be performed 2 minutes and 30 seconds after starting of the operation.
- Be sure to prepare a diode for judgment.




Normal time : Voltage swings between DC15 and 60V.Inverter Assembly check (**11-7-1**.) Abnormal time : Voltage does not vary.

(2) Outdoor unit stops in a little while after operation started

<Check procedure> Select phenomena described below.

1) The outdoor unit stops 10 to 20 minutes after operation started, and 10 minutes or more are required to restart the unit.

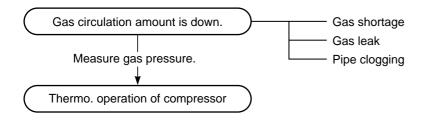

2) If the unit stops once, it does not operate until the power will be turned on again.


To item of Outdoor unit does not operate.

3) The outdoor unit stops 10 minutes to 1 hour after operation started, and an alarm is displayed. (Discharge temp. error check code 03, 1E Sensor temp. error check code 02, 1C)

Gas leak ————		
P.M.V. is defective. —		Refer to the chart in 11-6.
Miswiring of connecting wires of indoor/outdoor units		Refer to the chart in 11-6.
Clogging of pipe and coming-off of TC sensor		


11-6. How to Check Simple the Main Parts

<Check procedure>

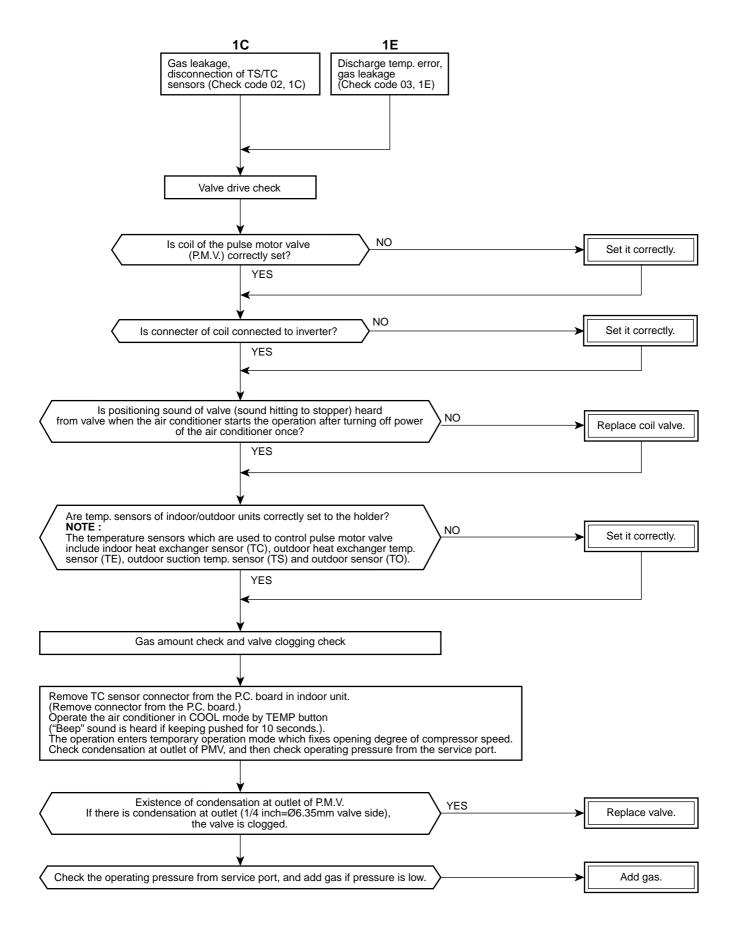

11-7. How to Diagnose Trouble in Outdoor Unit

11-7-1. Summarized Inner Diagnosis of Inverter Assembly

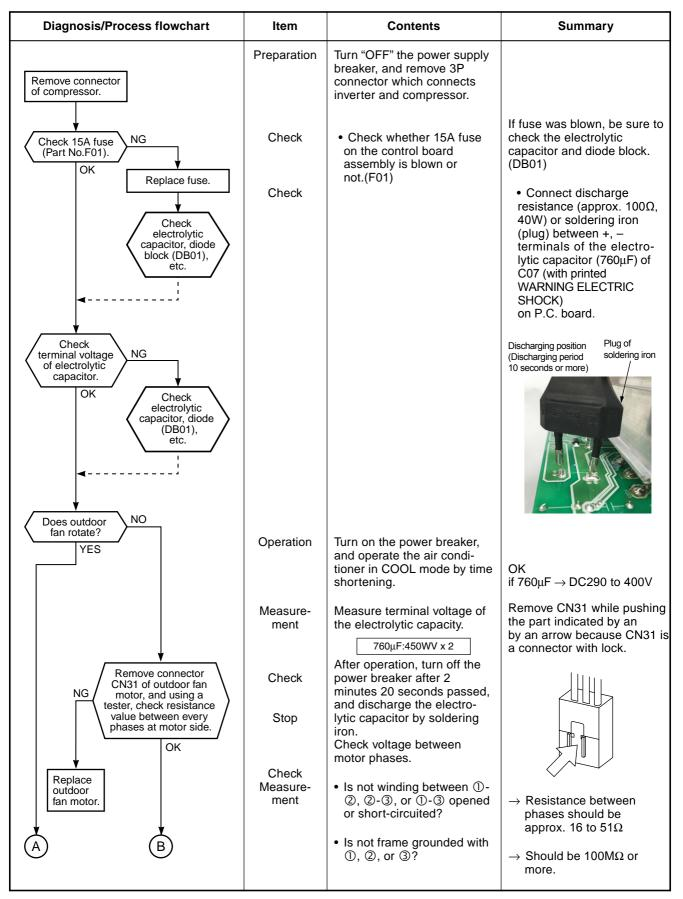

Diagnosis/Process flowchart	ltem	Contents	Summary
A B Replace control board assembly. Check compressor winding resistance. OK Replace control board. Replace compressor.	Check	 Check winding resistance between phases of compres- sor, and resistance between outdoor frames by using a tester. Is not grounded. Is not short-circuited between windings. Winding is not opened. Remove connector CN31 of the outdoor fan motor, turn on the power supply breaker, and perform the operation. (Stops though activation is prompted.) Check operation within 2 minutes 20 seconds after activation stopped. 	 → OK if 20MΩ or more → OK if about 3.03Ω for RAS-07BAV-E 3.27Ω for RAS-10,13BAV-E → (Check by a digital tester.)

11-8. How to Check Simply the Main Parts

11-8-1. How to Check the P.C. Board (Indoor Unit)

(1) Operating precautions

- 1) When removing the front panel or the P.C. board, be sure to shut off the power supply breaker.
- 2) When removing the P.C. board, hold the edge of the P.C. board and do not apply force to the parts.
- 3) When connecting or disconnecting the connectors on the P.C. board, hold the whole housing. Do not pull at the lead wire.

(2) Inspection procedures

- 1) When a P.C. board is judged to be defective, check for disconnection, burning, or discoloration of the copper foil pattern or this P.C. board.
- 2) The P.C. board consists of the following 2 parts

a. Main P.C. board part :

DC power supply circuit, Indoor fan motor control circuit, CPU and peripheral circuits, buzzer, and Driving circuit of louver.


b. Indication unit of infrared ray receiving infrared ray receiving circuit, LED : To check defect of the P.C. board, follow the procedure described below.

(3) Check procedures


Table 11-8-1

No.	Procedure	Check points	Causes
1	Turn off the power supply breaker and remove the P.C. board assembly from electronic parts base. Remove the connecting cables from the terminal block.	Check whether or not the fuse (F01) is blown.	Impulse voltage was applied or the indoor fan motor short-circuited.
2	Remove the connector of the motor and turn on the power supply breaker. If OPERATION indicator flashes (once per second), it is not necessary to check steps (1 to 3) in the right next column.	 Check power supply voltage : 1. Between CN30 and CN31 (AC 220–240V) 2. Between ⊕ and ─ of C08 (DC 310–340V) 3. Between 12V and GND 4. Between 5V and GND 	 The terminal block or the crossover cable is connected wrongly. The capacitor (C01), line filter (L01), resistor (R10), or the diode (DB01) is defective. T01 is defective. IC02 and T01 are defective.
3	Push [心] button once to start the unit. (Do not set the mode to On-Timer operation.)	Check power supply voltage : 1. Between CN23 and CN31 (DC 15–60V)	IC51 and IC52 are defective.
4	Shorten the restart delay timer and start unit.	Check whether or not all indicators (OPERATION,TIMER) are lit for 3 seconds and they return to normal 3 seconds later.	The indicators are defective or the housing assembly (CN14) is defective.
5	 Push [⁽¹⁾] button once to start the unit. Shorten the restart delay timer. Set the operation mode to COOL. Set the fan speed level to AUTO. Set the preset temperature much lower than the room temperature. (The unit (compressor) operates continuously in the above condition.) 	 Check whether or not the compressor operates. Check whether or not the OPERATION indicator flashes. 	 The temperature of the indoor heat exchanger is extremely low. The connection of the heat exchanger sensor is loose. (The connector is disconnected.) (CN62) The heat exchanger sensor and the P.C. board are defective. (Refer to Table 11-4-1.) The main P.C. board is defective.
6	 If the above condition (No. 5) still continues, start the unit in the following condition. Set the operation mode to HEAT. Set the preset temperature much higher than room temperature. 	 Check whether or not the compressor operates. Check whether or not the OPERATION indicator flashes. 	 The temperature of the indoor heat exchanger is extremely high. The connection of the heat exchanger sensor short-circuited. (CN62) The heat exchanger sensor and the P.C. board are defective. (Refer to Table 11-4-1.) The main P.C. board is defective
7	 Connect the motor connector to the motor and turn on the power supply. Start the unit the following condition. Set the fan speed level to HIGH. (The unit (compressor) operates continuously in the above condition in No. 5.) 	 Check it is impossible to detect the voltage (AC120V or higher voltage) between red and black lead of the motor. The motor does not operate or the fan motor does not rotate with high speed. (But it is possible to receive the signal from the remote controller.) The motor rotates but vibrates strongly. 	 The indoor fan motor is defective. (Protected operation of P.C. board.) The P.C. board is defective. The connection of the motor connector is loose.

11-8-2. P .C . Board Layout

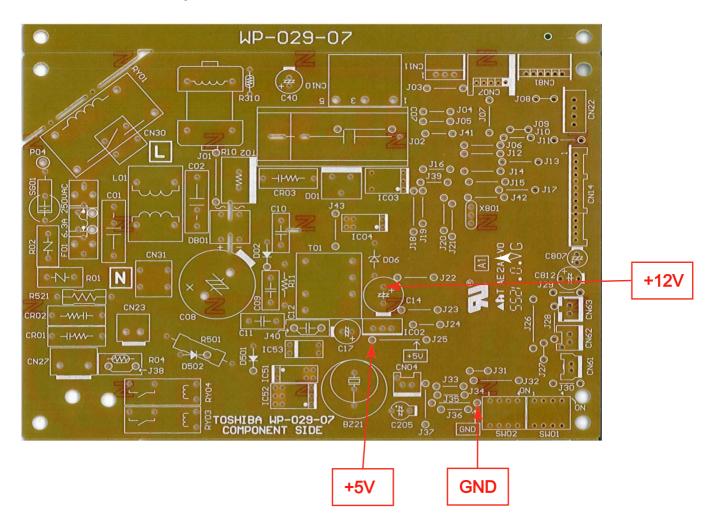

[1] Sensor characteristic table

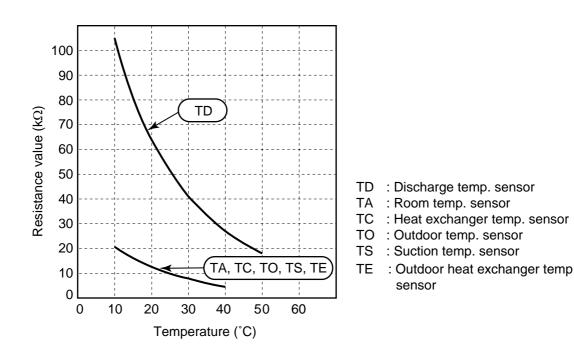

11-8-3. Indoor Unit (Other Parts)

No.	Part name	Checking procedure					
1	Room temp. (TA) sensor Heat exchanger (TC) sensor	Disconnect the connector and measure the resistance value with tester. (Normal temp.)					
		Temperature 10	10°C	20°C	25°C	30°C	40°C
		TA, TC (kΩ) 20	20.7	12.6	10.0	7.9	4.5
2	Remote controller	Refer to 11-5-1. (5).					
3	Louver motor 24BYJ48-A-080	Measure the resistance value of each winding coil by using the tester. (Under normal temp. 25°C)					
		White 1		Position	ר R	esistanc	e value
		Yellow 22 (1 to 2)		200Ω ±	: 7%		
4	Indoor fan motor	Refer to 11-5-1. (3) and (4).					

11-8-4. OutdoorUnit

No.	Part name	Checking procedure				
1	Compressor	Measure the resistance value of each winding by using the tester.			ster.	
	07k Series Model : NX66F0F-20D	Back	Back		esistan -20D	ce value NX89F0F-20D
	10,13k Series Model : NX89F0F-20D	White Bed	Red - Wh White - Black - R	ack 3.199	5	3.36Ω
						Under 20°C
2	Outdoor fan motor (Model : WDF-340-A43-1)	Measure the resistance va	lue of wind	ing by using th	e teste	er.
			Red		Resi	stance value
		(con lee	(referred)	White - Black		16 to 51Ω
		White Black	κ L	Black- Red	Black- Red	
3	4-way valve coil	Measure the resistance va	lue of wind	ing by using th	e teste	er.
	(Model : DXQ-939)				ance val	
			L	145	50 ± 150Ω	
						Under 20°C
4	Pulse modulating valve coil	Measure the resistance va	lue of wind	ing by using th	e teste	er.
	(Model : PQ-M10012-000313)	1 W -	\setminus [Position	Resi	stance value
		$COM \rightarrow 6 GR - \left(\begin{array}{c} \\ \\ \\ \\ \\ \end{array} \right) $				42 to 50Ω
			Gray - Orange	_	42 to 50Ω	
				Gray-Yellow		42 to 50Ω
		Y GR I COM 2 5	1	Gray- Blue		42 to 50Ω
		f				Under 20°C

5	Outdoor temperature sensor (TO), discharge temperature	Disconnect the connector, and measure resistance value with the tester. (Normal temperature)					
	sensor (TD), suction temperature sensor (TS), exchanger temperature sensor (TE)	Temperature Sensor	10°C	20°C	30°C	40°C	50°C
		TD (kΩ)	105	64	41	27	18
		TO, TS, TE (k Ω)	20.7	12.6	7.9	4.5	3.4

11-8-5. Checking Method for Each Part

No.	Part name	Checking procedure		
1	Electrolytic capacitor (For raising pressure, smoothing)	 Turn OFF the power supply breaker. Discharge all three capacitors completely. Check that safety valve at the bottom of capacitor is not broken. Check that vessel is not swollen or exploded. Check that electrolytic liquid does not blow off. Check that the normal charging characteristics are show in continuity test by the tester. 		
		$\begin{tabular}{ c c c c } \hline & & & & & & & & & & & & & & & & & & $		
2	Converter module	 1. Turn OFF the power supply breaker. 2. Discharge all three capacitors completely. 3 Check that the normal rectification characteristics are shown in continuity test by the tester. 		
		Diode check		
		Tester rod Resistance value in good product		
		$ \begin{array}{cccc} & \oplus_1 & \bigoplus_4 \\ & \bigoplus_2 & & \\ & \bigoplus_3 & \bigoplus_4 \\ & \oplus_1 & \bigoplus_3 \\ \end{array} $ 50k Ω or more (0 Ω in trouble)		

11-9. How to Simply Judge Whether Outdoor Fan Motor is Good or Bad

1. Symptom

- Outdoor fan motor does not rotate.
- Outdoor fan motor stops within several tens seconds though it started rotating.

• Outdoor fan motor rotates or does not rotate according to the position where the fan stopped, etc.


Remote controller check code "02 : Outdoor block, 1A : Outdoor fan drive system error"

2. Cause

The following causes are considered when the outdoor fan motor does not normally rotate.

- 1) Mechanical lock of the outdoor fan motor
- 2) Winding failure of the outdoor fan motor
- 3) Position-detect circuit failure inside of the outdoor fan motor
- 4) Motor drive circuit failure of the outdoor P.C. board

3. How to simply judge whether outdoor fan motor is good or bad

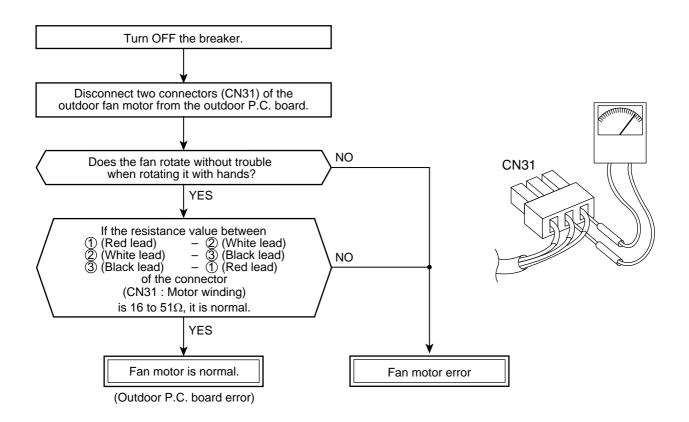

NOTE :

However, GND circuit error inside of the motor may be accepted in some cases when the above check is performed.

When the fan motor does not become normal even if P.C. board is replaced, replace the outdoor fan motor.

11-10. How to setting the CLEAN OPERATION cancel

11-10-1. Self-Cleaning • Self-Cleaning diagram function

Operation display	ON	OFF	OFF
FCU fan	ON rpm is depend on presetting.	ON (500RPM)	OFF
FCU louver	OPEN	OPEN (12.7°)	CLOSE
Timer display	ON or OFF depend on presetting of timer function.	ON	ON or OFF depend on presetting of timer function.
Compressor	ON or OFF depend on presetting per room temperature.	OFF	OFF
CDU fan	ON or OFF depend on presetting per room temperature.	OFF	OFF
	Cool mode or dry mode operation more than 10 mins.	Self-Cleaning mode operate 20 mins.	Operation time

Turn off by remote controller or timer-off function.

11-10-2. Self-Cleaning function release

How to set/cancel Self-Cleaning function


To set/cancel the Self-Cleaning function, proceed as follows:

- Setting diagnosis code "06" on remote controller (See detail of setting diagnosis code in 11-4-1)
- Turn on the poert supply to air conditioner, after that press [RESET] button on air conditioner
 1 time to turn on the air conditioner (The LED display will show in green color) (Fig. 11-10-1)
- Take the remote controller to direction of LED display on air conditioner, press [TEMP ▲] of the remote controller (Fig. 11-10-2) 1 time to send the code "07", then air conditioner will shutdown automatically. Also, LED display will show flash follow the able below.

Self-cleaning function	Operation LED	Timer LED
ON	flash 1 Hz	not flash
OFF	flash 1 Hz	Flash 1 Hz

Note) Table above will show current status of Self-Cleaning function

 Set or Cancel Self-Cleaning function by push the RESET button at LED display.
 When setting is changed, the sound warning will alarm "Beep". The setting is changed following below.



• Turn on air conditioner again by remote controller to confirm setting.

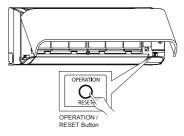


Fig. 11-10-1

12. HOW TO REPLACE THE MAIN PARTS

WARNING

• Since high voltages pass through the electrical parts, turn off the power without fail before proceeding with the repairs.

Electric shocks may occur if the power plug is not disconnected.

- After the repairs have been completed (after the front panel and cabinet have been installed), perform a test run, and check for smoking, unusual sounds and other abnormalities.
 If this check is omitted, a fire and/or electric shocks may occur.
 Before proceeding with the test run, install the front panel and cabinet.
- Ensure that the following steps are taken when doing repairs on the refrigerating cycle.
 - Do not allow any naked flames in the surrounding area. If a gas stove or other appliance is being used, extinguish the flames before proceeding. If the flames are not extinguished, they may ignite any oil mixed with the refrigerant gas.
 - 2. Do not use welding equipment in an airtight room.
 - Carbon monoxide poisoning may result if the room is not properly ventilated.
 - Do not bring welding equipment near flammable objects.
 Flames from the equipment may cause the flammable objects to catch fire.
- If keeping the power on is absolutely unavoidable while doing a job such as inspecting the circuitry, wear rubber gloves to avoid contact with the live parts.
 Electric shocks may be received if the live parts are touched.
 High-voltage circuits are contained inside this unit.
 Proceed very carefully when conducting checks since directly touching the parts on the control circuit board may result in electric shocks.

12-1. Indoor Unit

No.	Part name	Procedures	Remarks
1	Air inlet grille	 Stop operation of the air conditioner and turn off its main power supply. Open the air inlet grille and push it up until the air inlet grille take off. <remark> If you do not have enough space for push the air inlet grille up until it take off, you can push the arms of air inlet grille toward the outside, and remove the air inlet grille. </remark> 	Air inlet grille
2	Air filters	 1) Follow to the procedure in the item ①. 1) Follow to the procedure in the item ①. 1) Follow to the procedure in the item ①. 2) Remove the left and the right air filters from the front panel. 	

FILE NO. SVM-16003-2

No.	Part name	Procedures	Remarks
3	Front panel	 Stop operation of the air conditioner and turn off its main power supply. Open two screw caps and securely remove screws (2 pcs.) at the front panel. Image: Constraint of the front panel from top side of the back body. Slightly open the lower part of the front panel then pull the upper part of the front panel toward you to remove it as shown on figure. 	Front panel Air intet grile Screw Screw Caps
4	Electric part box assembly	 Follow the procedure item (3). Remove screw holding the electric part cover. Image: Ansatz and Ansatz an	

No.	Part name	Procedures	Remarks
5	Fan motor	 Follow the procedure item ③and④. Loosen the set screw of the cross flow fan. 	Cross flow fan
		 3) Remove 2 fixing screws of the motor band. 4) Pull the motor band and the fan motor outward. 	Screws Of the second se
		<to re-installation=""></to>	l Fan motor
		 Check the type name of fan motor. Keep connector position and arrange fan motor wires follow figure. 	
		For SJM-240-25	
		Fan motor connector	
6	Horizontal louver	 Remove shaft of the horizontal louver from the back body. (First remove 2 the center shafts then remove the other shafts.) 	Drain par

No.	Part name	Procedures	Remarks
	Drain pan assembly	 Follow the procedure item ③. Remove screw holding the electric part cover. 	Connectors Screw Electric part cover
		 3) Disconnect the louver motor connector (5P) from P.C. board assembly. 4) Remove fixing screws of the unit display and remove unit display. 	Unit display
		brain pan Center arm of drain pan Back body 5) Remove the drain pan from the back body.	
		<to re-installation=""></to> Press the drain pan into the back body Please make sure ribs of drain pan in left and right side must be install to lock position. Press the center arm of drain pan to back body. 	
		Back body Rib of drain pan Orain pan Center arm Orain pan Back body	Back body

Part name	Procedures	Remarks
Vertical louver assembly	 Follow the procedure item(3)and(7). Remove 2 fixing screws from the base vertical louver then remove the vertical louver assembly from the body back. 	Vertical louver
Cross flow fan	 Follow the procedure item ③and ④. Loosen the set screw of the cross flow fan. Remove 4 fixing screws from the bearing base then remove it from the main unit. 	Heat exchanger
	4) Lift up the heat exchanger follow the figure. Pull out the left hand side until the cross flow fan is released from the shaft of the fan motor and then pull out the lower side of heat exchanger follow the figure.	Heat exchanger
	To re-installation> To incorporate the fan motor and the motor into the position in the following figure. Install the cross flow fan so that the right end of the 1st joint from the right of the Cross flow fan is keep 3.5mm from closed wall of the main unit. 	Cross flow fan
	Cross flow fan Body back 3.5 mm Group Body back Set screw Fan motor	
	- Holding the set screw, install the cross flow fan so that flat area on shaft of the fan motor comes to the mounting hole of the set screw.	
	Vertical louver assembly	Vertical louver assembly 1) Follow the procedure item③and⑦. 2) Remove 2 fixing screws from the base vertical louver then remove the vertical louver assembly from the body back. Cross flow fan 1) Follow the procedure item③and④. 2) Loosen the set screw of the cross flow fan. 3) Remove 4 fixing screws from the bearing base then remove it from the main unit. 4) Lift up the heat exchanger follow the figure. Pull out the left hand side until the cross flow fan is released from the shaft of the fan motor and then pull out the lower side of heat exchanger follow the figure. 1) To incorporate the fan motor and the motor into the position in the following figure. 1) To incorporate the fan motor and the motor into the position in the following figure. 1) To incorporate the fan motor and the motor into the position in the following figure. 1) To incorporate the fan motor and the cross flow fan is keep 3.5mm from closed wall of the main unit. Upper set screw, install the cross flow fan is keep 3.5mm from closed wall of the main unit. Upper set screw, install the cross flow fan so that flat area on shaft of the fan motor comes to the mounting hole

FILE NO. SVM-16003-2

No. Part name	Procedures	Remarks
No. Part name ① Heat exchanger (Evaporator)	 Procedures 1) Follow the procedure in item (3) and (4). 2) Remove 2 fixing screws at the left side of the heat exchanger. 3) Remove fixing screw at the upper right side of the heat exchanger. 4) Remove the pipe holder from the rear side of the main unit. 5) Pull out the right hand side until the locking slot of heat exchanger is released from the hook of the motor cover then pull out the upper side of heat exchanger. 	

12-2. Microcomputer

No.	Part name	Procedure	Remarks
1	Common procedure	 Turn the power supply off to stop the operation of air-conditioner. Remove the front panel. Remove the 2 fixing screws. Remove the electrical part base. 	Replace terminal block, microcomputer ass'y and the P.C. board ass'y.

12-3. Outdoor Unit

No.	Part name	Procedures	Remarks
•	Common procedure	 Detachment Stop operation of the air conditioner, and turn off the main switch and breaker of the air conditioner. Remove the valve cover. (ST2TØ4 x 10ℓ 1 pc) 	
2	Front cabinet	 Detachment Perform work of item 1 of ①. Remove upper screw (ST2TØ4 x 10ℓ 4 pcs.) of the front cabinet, and lower screws (ST2TØ4 x 10ℓ 8 pcs.) of the front cabinet. Both side of front cabinet envelop the unit, so remove it by pulling sideward. Attachment Assemble front cabinet to the unit. Attach the removed screws to the original positions. 	(Left side) (Left side)

No.	Part name	Procedure	Remarks
3	Inverter assembly	 Perform work of item 1 in ①. Remove screw (ST2TØ4×10L 2 pcs.) of the upper part of the front cabinet. Disconnect connectors all connector on 	Inverter module cover
		 P.C. board. Take off P.C. board out from spacer under P.C. board. If there is no space above the unit, perform work of 1 in 2. 	
		Be careful to check the inverter because high-voltage circuit is incorporated in it.	P.C. board (Soldered surface)
		 Perform discharging by connecting ⊕, ⊖ polarity by discharging resistance (approx. 100Ω40W) or plug of soldering iron to ⊕, ⊖ terminals a of the C07 (printed "CAUTION HIGH VOLTAGE" is attached.) electrolytic capacitor (760µF) on P.C. board. 	Discharging position (Discharging period 10 seconds or more) Plug of soldering iron
		Be careful to discharge the capacitor because the electrolytic capacitor cannot naturally discharge and voltage remains according to trouble type in some cases.	screw
		NOTE This capacitor is one with mass capacity. Therefore, it is dangerous that a large spark generates if short-circuiting between ⊕, —	P.C. board (component Side)
		4) Remove screw (ST2TØ4 x 10L 4pcs.) fixing the terminal part of inverter box to the main body.	
		 5) Remove the front cabinet by performing step 1 in ②, and remove the fixing screws (ST2TØ4 x 10L) for securing the main body and inverter box. 6) Disconnect connectors of various lead wires. 	The connector is one with lock, so remove it while pushing the part indicated by an arrow.
		Requirement As each connector has a lock mecha- nism, avoid to remove the connector by holding the lead wire, but by holding the connector.	
			Be sure to remove the connector by holding the connector, not by pulling the lead wire.

No.	Part name	Procedures	Remarks
4	Fan motor	 Perform work of item 1 of ① and 1 of ②. Remove the flange nut fixing the fan motor and the propeller fan. Flange nut is loosened by turning clockwise. (To tighten the flange nut, turn counter- clockwise.) Remove the propeller fan. Disconnect the connector for the fan motor from the inverter. Remove the fixing screws (4 pcs.) holding the fan motor by hand so that it does not fall. Cut the motor lead at the point which is 100 mm apart from the connector toward the fan. Use the connector used for the inverter, and pinch the lead wires using the closed end splice. 	Fan motor Propeller fan Closed end splice
\$	Compressor	 Perform work of item 1 of ①, 1 of ② and ③. Extract refrigerant gas. Remove the partition board. (ST2TØ4 x 10ℓ 3 pcs.) Remove the sound-insulation material. Remove the terminal cover of the compressor, and disconnect the lead wire of the compressor thermo and the compressor from the terminal. Remove the pipe connected to the compressor with a burner. Make sure the flame does not touch the 4 way valve. Remove the fixing screw of the base plate and heat exchanger. (ST2TØ4 x 10ℓ 2 pcs.) Pull upward the refrigeration cycle. Remove the nut fixing the compressor to the base plate. 	Compressor ®


No.	Part name	Procedures	Remarks
6	Fan guard	 Detachment Perform work of item 1 of ① and 1 of ②. Requirement: Perform the work on a corrugated cardboard, cloth, etc. to prevent scratches to the product. 	
		 Remove the front cabinet, and place it down so that the fan guard side faces downwards. Remove the hooking claws by pushing a minus screwdriver according to the arrow mark in the right figure, and remove the fan guard. 	Minus screwdriver Hooking claw
		 Attachment 1) Insert the claws of the fan guard in the hole of the front cabinet. Push the hooking claws (8 positions) by your hand and fix the claws. 	
		Requirement: This completes all the attaching work. Check that all the hooking claws are fixed to the specified positions.	
0	Pulse Modulating Valve coil	 Detachment Perform work of item 1 of ① and 1 of ② and ③. Turn the coil by 180 degrees then remove by pull it upward. 	
		 2. Attachment 1) Insert the coil at position which perpendicular with pipe of PMV then turn the coil by 180 degrees. Make sure that lead wire of coil 	Rotate 180°C
		is opposite with pipe of PMV	BODY-PMV COIL-PMV

No.	Part name	Procedure	Remarks
No.	Part name Control board assembly	Procedure Disconnect the leads and connectors connected to the other parts from the control board assembly. Deads 3 leads (black, white, orange) connected to terminal block. Lead connected to compressor : Disconnect the connector (3P). Connectors CN31 : Outdoor fan motor (3P: white)* (* : See Note) CN72 : 4-way valve (2P: yellow)* CN61 : TE sensor (2P: white)* CN63 : TO sensor (3P: white)* CN63 : TO sensor (3P: white)* CN63 : TO sensor (2P: white)* CN63 : TO sensor (2P: white)* CN63 : TO sensor (2P: white) CN64 : TS sensor (2P: white)* CN63 : TO sensor (2P: white)* CN63 : TO sensor (2P: white)* CN63 : TO sensor (2P: white) CN63 : TO sensor (2P: white) CN64 : TS sensor (2P: white)* CN64 : TS sensor (2P: white)*	Remarks
L			

0	Replacement of temperature sensor	1) Cut th			
	for servicing only Common service parts of sensor TO, TS, TE	 one. 2) Cut the it (2000) 3) Move therm lead we part. 4) Pass of therm 5) Cut the the concord of the concord of	At the protective tube after pulling out (200 mm). To we the protective tube toward the ermal sensor side and tear the tip of ad wire in two then strip the covering art. The stripped part through the ermal constringent tube. The old sensor 100 mm length on the connector side, and recycle that innector. The lead wire in two on the con- ector side and strip the covering part. This the leads on the connector and insor sides, and solder them. To we the thermal constringent tubes ward the soldered parts and heat em with the dryer and constring		Cutting here
	These are parts for servicing sensors.	2) Ne ins 3) Wh	Pre the joint part of the sensor and the sensor and the sensor and the sensor inferiority because of dew determined and the sensor using the color of that the sensor using the color of that the sensor s	he conne sor part. (rops. colored pr	Otherwise it would cause
	Please check that the accessories				
	shown in the right	2	Sensor Spring (A)	1	For spare
	table are packed.	3	Sensor Spring (B)	1	For spare
		4	Thermal constringent tube	3	Including one spare
		5	Color tape	1	9 colors
		6	Terminal	3	


13. EXPLODED VIEWS AND PARTS LIST

13-1. Indoor Unit

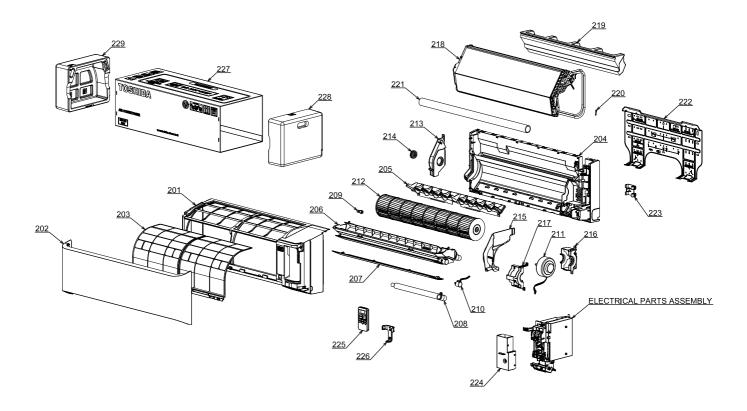


Location	Part	Description	Location	Part	Description
No.	No.	Description	No.	No.	Description
201	43T00685	FRONT PANEL ASSY	218	43T44556	REFRIGERATION CYCLE ASSY
202	43T09520	GRILLE OF AIR INLET ASSY			(FOR RAS-07BKV-E)
203	43T80349	AIR FILTER	218	43T44557	REFRIGERATION CYCLE ASSY
204	43T03398	BACK BODY ASSY			(FOR RAS-10BKV-E)
205	43T22343	VERTICAL LOUVER ASSY	218	43T44559	REFRIGERATION CYCLE ASSY
206	43T72325	DRAIN PAN ASSY			(FOR RAS-13BKV-E)
207	43T22345	HORIZONTAL LOUVER	219	43T39370	EVAPORATOR HINS SEAL
208	43T70321	DRAIN HOSE	220	43T19333	HOLDER, SENSOR
209	43T79322	DRAIN CAP	221	43T49359	PIPE, SHIELD
210	43T21461	STEPPING MOTOR	222	43T82332	INSTALLATION PLATE
211	43T21462	MOTOR FAN	223	43T49368	PIPE HOLDER
212	43T20344	CROSS FLOW FAN ASSY	224	43T62360	TERMINAL COVER ASSY
213	43T39365	BASE BEARING	225	43T6V672	WIRELESS REMOTE CONTROL
214	43T22312	BEARING ASSY, MOLD	226	43T83310	HOLDER, REMOTE CONTROL
215	43T39364	MOTOR COVER	227	43T91305	PACKING SLEEVE
216	43T39368	MOTOR BAND BACK	228	43T91306	PACKING CUSHION RIGHT
217	43T39369	MOTOR BAND FRONT	229	43T91307	PACKING CUSHION LEFT

13-2. Indoor Unit (Part-E)

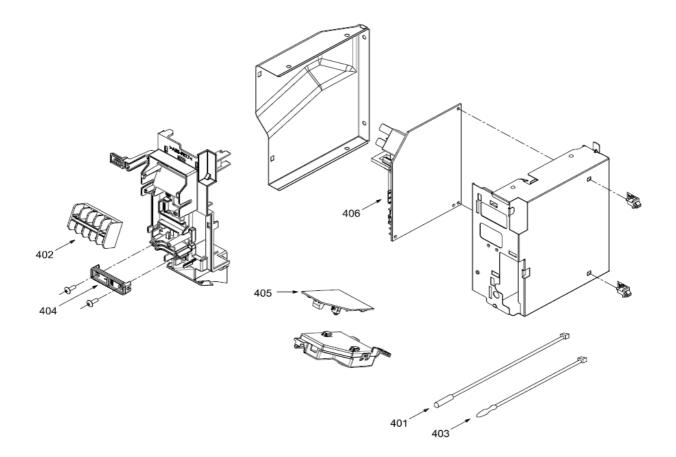


Location No.	Part No.	Description	Location No.	Part No.	Description
401	43T69319	TEMPERATURE SENSOR	405	43T6V681	PC BOARD ASSY:WRS-LED
402	43T6V673	TERMINAL(5P-TF)	406	43T6V678	PC BOARD(FOR RAS-07BKV-E)
403	43T6V674	TEMPERATURE SENSOR	406	43T6V679	PC BOARD(FOR RAS-10BKV-E)
404	43T62340	CORD-CLAMP	406	43T6V680	PC BOARD(FOR RAS-13BKV-E)

13-3. Outdoor Unit RAS-07BAV-E, RAS-10BAV-E

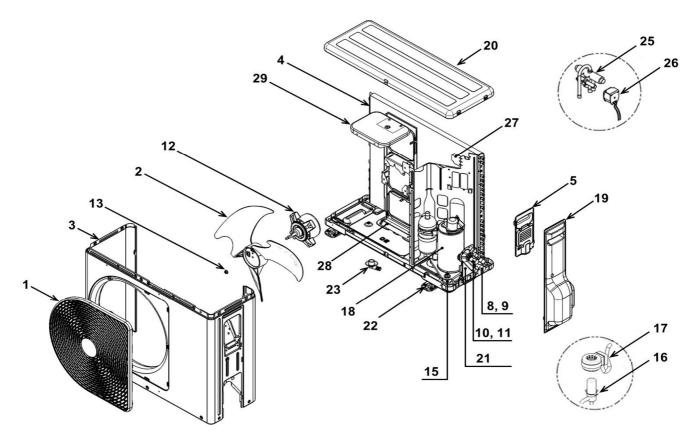


Location No.	Part No.	Description	Location No.	Part No.	Description
1	43T19363	FAN GUARD	18	43T41487	COMPRESSOR(for RAS-07BAV-E)
2	43T20324	PROPELLER FAN	19	43T19337	PACKED VALVE COVER
3	43T00682	FRONT CABINET ASSEMBLY	20	43T00684	UPPER CABINET ASSEMBLY
4	43T43537	CONDENSER ASSEMBLY	21	43T00448	FIXING PLATE VALVE
5	43T62323	TERMINAL COVER	22	43T42335	BASE PLATE ASSEMBLY
8	43T46436	VALVE; PACKED 9.52 DIA	23	43T79305	DRAIN NIPPLE
9	43T47332	BONNET, 9.52 DIA	25	43T46470	4 WAY VALVE
10	43T46435	VALVE; PACKED 6.35 DIA	26	43T63361	4 WAY VALVE COIL
11	43T47331	BONNET, 6.35 DIA	27	43T04325	PARTITION ASSEMBLY
12	43T21460	FAN MOTOR	28	43T39325	MOTOR BASE
13	43T47001	NUT FLANGE	29	43T39334	MOTOR BASE CONNECTION PLATE
15	43T49327	CUSHION, RUBBER	30	43T91304	CARTON BOX
16	43T46469	BODY PMV	31	43T91303	ASM-FBBRD-UD
17	43T63360	COIL PMV	32	43T91302	CUSHION-PKG-UPR
18	43T41486	COMPRESSOR(for RAS-10BAV-E)	33	43T91301	PE SHEET

13-4. Outdoor Unit RAS-13BAV-E

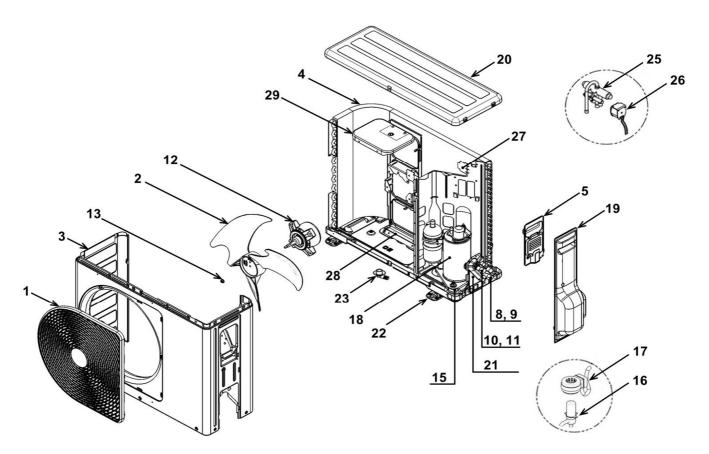

Location No.	Part No.	Description	Location No.	Part No.	Description
1	43T19363	FAN GUARD	19	43T19337	PACKED VALVE COVER
2	43T20324	PROPELLER FAN	20	43T00684	UPPER CABINET ASSEMBLY FIXING
3	43T00683	FRONT CABINET ASSEMBLY	21	43T00448	PLATE VALVE
4	43T43538	CONDENSER ASSEMBLY	22	43T42335	BASE PLATE ASSEMBLY
5	43T62323	TERMINAL COVER	23	43T79305	DRAIN NIPPLE
8	43T46436	VALVE; PACKED 9.52 DIA	25	43T46470	4 WAY VALVE
9	43T47332	BONNET, 9.52 DIA	26	43T63361	4 WAY VALVE COIL
10	43T46435	VALVE; PACKED 6.35 DIA	27	43T04325	PARTITION ASSEMBLY
11	43T47331	BONNET, 6.35 DIA	28	43T39325	MOTOR BASE
12	43T21460	FAN MOTOR	29	43T39334	MOTOR BASE CONNECTION PLATE
13	43T47001	NUT FLANGE	30	43T91304	CARTON BOX
15	43T49327	CUSHION, RUBBER	31	43T91303	ASM-FBBRD-UD
16	43T46469	BODY PMV	32	43T91302	CUSHION-PKG-UPR
17	43T63360	COIL PMV	33	43T91301	PE SHEET
18	43T41486	COMPRESSOR			

13-5. Outdoor Unit (Part-E)

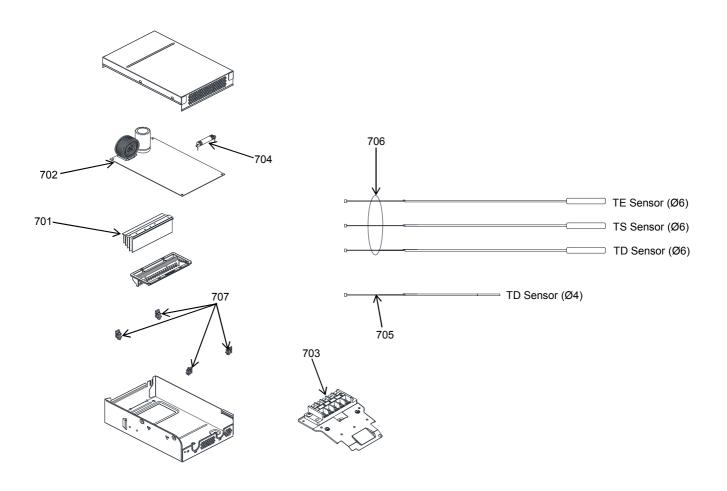

Location	Part	Description	Location	Part	Description
No.	No.	Description	No.	No.	Description
701	43T67306	HEATSINK	704	43T60459	FUSE
702	43T6V682	PC BOARD(FOR RAS-07BAV-E)	705	43T60465	TEMPERATURE SENSOR
702	43T6V683	PC BOARD(FOR RAS-10BAV-E)	706	43T50304	SENSOR;HEAT EXCHANGER
702	43T6V684	PC BOARD(FOR RAS-13BAV-E)	707	43T95304	SPACER-KGES
703	43T60392	TERMINAL-5P			

TOSHIBA CARRIER (THAILAND) CO.,LTD.